WD17H7*****

Washing Machine

User manual

Imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

Content

Safety information 3

What you need to know about the safety instructions . . . 3
Important safety symbols . . . 3
Important safety precautions . . . 4

Installation 12

What's included . . . 12
Installation requirements . . . 13
Step-by-step installation . . . 15

Before you start 20

Run Calibration (recommended) . . . 20
Laundry guidelines . . . 21
Detergent drawer guidelines . . . 23

Operations 25

Control panel . . . 25
Simple steps to start . . . 27
Program overview . . . 28
Options . . . 30
User convenience & maintenance . . . 31
Settings . . . 32
Smart check . . . 33

Maintenance 34

Eco Drum Clean . . . 34
Drying Drum . . . 34
Emergency drain . . . 35
Cleaning . . . 36
Recovery from freezing . . . 38
Care against an extended time of disuse . . . 38

Troubleshooting 39

Checkpoints . . . 39
Information codes . . . 40

Specifications 41

Protecting the environment . . . 41
Fabric care chart . . . 42
Specification sheet . . . 43

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine.

Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠	**WARNING**: Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage**.
⚠	**CAUTION**: Hazards or unsafe practices that may result in **personal injury and/or property damage**.
	NOTE

These warning signs are here to prevent injury to yourself and others.

Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Important safety precautions

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your product. The product door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

The lint trap has to be cleaned frequently, if applicable.

Lint must not to be allowed to accumulate around the tumble dryer. (not applicable for appliances intended to be vented to the exterior of the building)

Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Do not dry unwashed items in the tumble dryer.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Remove all objects from pockets such as lighters and matches.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

For use in Europe: Children of less than 3 years should be kept away unless continuously supervised.

⚠ WARNING: Critical installation WARNINGS

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, therefore take care when lifting it.

Plug the power cord into an AC 220 V / 50 Hz wall socket or higher and use the socket for this appliance only. Never use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket so that the cord is running towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials out of the reach of children as these may be dangerous.

- If a child places a bag over its head, it may suffocate.

When the appliance, power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.

Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

⚠ CAUTION: Installation CAUTIONS

This appliance should be positioned in such a way that the power plug is easily accessible.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a solid, level floor that can support its weight.

- Failure to do so may result in abnormal vibrations, movement, noise, or problems with the product.

⚠ WARNING: Critical usage WARNINGS

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the washing machine door lever.

- If trapped inside the product, children may suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washing machine before using it.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.

- This may result in electric shock, fire, or an explosion.

Do not open the washing machine door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washing machine may result in burns or cause the floor to be slippery. This may result in injury.
- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washing machine while an operation is in progress.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or the infirm use this washing machine without proper supervision. Do not let children climb in or onto the appliance.

- This may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washing machine while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling the power cord. Always grip the plug firmly and pull it straight out of the outlet.

- Damage to the power cord may cause a short-circuit, fire and/or electric shock.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.

- Failure to do so may result in electric shock or fire.

If any foreign substance enters into the appliance, unplug the power plug and contact you nearest Samsung Customer Service.

- This may result in electric shock or fire.

⚠ CAUTION: Usage CAUTIONS

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washing machine using a damp, soft cloth.

- Failure to do so may result in discolouration, deformation, damage, or rust.

The front glass may be broken by a strong impact. Take care when using the washing machine.

- If the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the water tap slowly.

Open the water tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may damage a product part or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

- If the washing machine is used when it is flooded because of a draining problem, it may result in electric shock or fire.

Insert the laundry into the washing machine completely so that the laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washing machine, or result in a water leak.

Turn the water supply off when the washing machine is not being used.

Ensure that the screws on the water supply hose connector are properly tightened.

- Failure to do so may result in property damage or injury.

Ensure that the rubber seal and front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.).

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leak.

Open the water tap and check if the water supply hose connector is firmly tightened and that there is no water leak before using the product.

- If the screws on the water supply hose connector are loose, it may result in a water leak.

The product you have purchased is designed for domestic use only.

Using the product for business purposes qualifies as a product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, this may result in electric shock, fire or problems with the product.

Do not place objects that generate electromagnetic fields near the washing machine.

- This may result in injury due to a malfunction.

Water drained during a high-temperature wash or drying cycle is hot. Do not touch the water.

- This may result in burns or injury.

Do not wash, spin, or dry water-proof seats, mats, or clothing (*) unless your appliance has a special cycle for washing these items.

(*): Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle and car covers, etc.

- Do not wash thick or hard mats even if the washing machine mark is on the care label. This may result in injury or damage to the washing machine, walls, floor, or clothing due to abnormal vibrations.
- Do not wash throw rugs or doormats with rubber backing. The rubber backing may come off and stick to inside the drum, and this may result in malfunction such as a drainage error.

Do not operate the washing machine when the detergent drawer is removed.

- This may result in electric shock or injury due to a water leak.

Do not touch the insides of the drum during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent drawer.

- This may result in injury as your hand may be caught by the detergent input device.

Do not place any objects (such as shoes, food waste, animals) other than laundry into the washing machine.

- This may result in damage to the washing machine, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may cause the rubber seal to become deformed and result in a water leak.

Do not leave metal objects such as safety pins, hair pins or bleach in the drum for long periods of time.

- This may cause the drum to rust.
- If rust starts appearing on the surface of the drum, apply a (neutral) cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat from the oxidation of the oil.

Do not use water from water cooling/heating devices.

- This may result in problems with the washing machine.

Do not use natural hand-washing soap for the washing machine.

- If it hardens and accumulates inside the washing machine, it may result in problems with the product, discolouration, rust, or bad odours.

Place socks and brassieres in a washing net and wash them with the other laundry.

Do not wash large laundry items such as bedding in the washing net.

- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washing machine, it may result in a water leak.

Make sure that the pockets of all the clothing items to be washed are empty.

- Hard, sharp objects such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons or other heavy metal objects.

Sort the laundry by color on the basis of its colorfastness and select the recommended cycle, water temperature and additional functions.

- This may result in discoloration or fabric damage.

Take care that children's fingers are not caught in the door when you close it.

- Failure to do so may result in injury.

⚠ WARNING: Critical cleaning WARNINGS

Do not clean the appliance by spraying water directly onto it.

Do not use the a strong acidic cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

Installation

Follow these instructions carefully to ensure proper installation of the washing machine and to prevent accidents when doing laundry.

What's included

Make sure all the parts are included in the product package. If you have a problem with the washing machine or the parts, contact a local Samsung customer centre or the retailer.

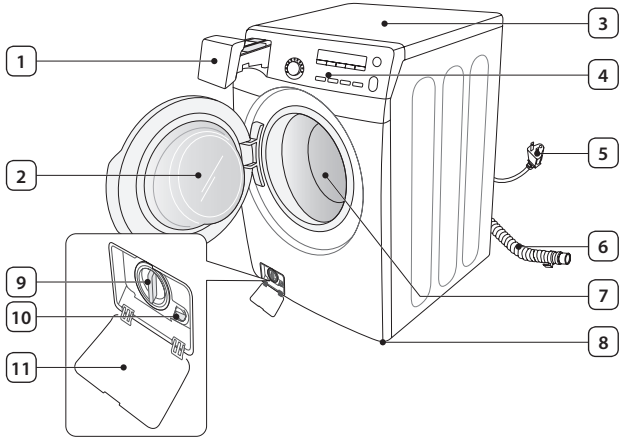

1	Detergent drawer
2	Door
3	Work top
4	Control panel
5	Power plug
6	Drain hose
7	Drum
8	Levelling feet
9	Debris filter
10	Emergency drain tube
11	Filter cover

Spanner

Bolt caps

Drain hose



Hose guide

Cold water supply hose

Hot water supply hose



Hose zip tie

Bolt caps : The provided number (3 to 6) of bolt caps depends on the model.
Hot water supply hose: Applicable models only.

Installation requirements

Electrical supply and grounding

- AC 220 V / 50 Hz fuse or circuit breaker is required
- Use an individual branch circuit specific to the washing machine

To ensure proper grounding, the washing machine comes with a power cord featuring a three-prong grounding plug for use in a properly installed and grounded outlet.

Check with a qualified electrician or serviceperson if you are not sure about the grounding.

Do not modify the provided plug. If it does not fit the outlet, call a qualified electrician to install a proper outlet.

WARNING

- Do NOT use an extension cord.
- Use only the power cord that comes with the washing machine.
- Do NOT connect the ground wire to plastic plumbing, gas lines, or hot water pipes.
- Improperly connected grounding conductors may cause electric shock.

Water supply

A proper water pressure for this washing machine is between 50 kPa and 800 kPa. Water pressure less than 50 kPa may cause the water valve not to close completely. Or, it may take longer to fill the drum, causing the washing machine to turn off. Water taps must be within 120 cm from the rear of the washing machine so that the provided inlet hoses reach the washing machine.

To reduce the risk of leaks

- Make sure water taps are easily accessible.
- Turn off the taps when the washing machine is not in use.
- Check for any leaks at the water inlet hose fittings on a regular basis.

CAUTION

Before using the washing machine for the first time, check all connections at the water valve and taps for any leaks.

Drain

Samsung recommends a standpipe in height of 60~90 cm. The drain hose must be connected through the hose clip to the standpipe, and the standpipe must fully cover the drain hose.

Flooring

For best performance, the washing machine must be installed on a solid floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are not a good resistance to vibrations and may cause the washing machine to move slightly during the spin cycle.

⚠ **CAUTION**

Do NOT install the washing machine on a platform or a poorly supported structure.

Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always retains some water in its water valves, pumps, and/or hoses. Frozen water left in the connection parts may cause damage to belts, the pump, and other components of the washing machine.

Alcove or closet installation

Minimum clearance for stable operation:

Sides	25 mm	Rear	50 mm
Top	25 mm	Front	550 mm

If both the washing machine and a dryer are installed in the same location, the front of the alcove or closet must have at least a 550 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

Step-by-step installation

STEP 1 - Select a location

Location requirements:

- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0 ˚C)
- Away from a heat source

STEP 2 – Remove the shipping bolts

Unpack the product package and remove all shipping bolts.

1. Loosen all shipping bolts on the rear of the machine using the supplied spanner.

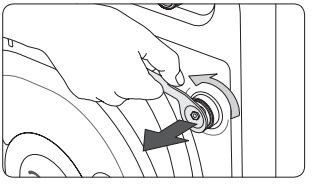

2. Fill the holes with the supplied plastic bolt caps.
   Keep the shipping bolts for future use.

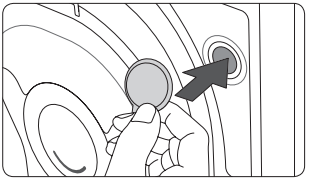

WARNING

Packaging materials can be dangerous to children. Dispose all packaging material (plastic bags, polystyrene, etc.) out of children's reach.

STEP 3 - Adjust the levelling feet

1. Gently slide the washing machine into position. Excessive force may damage the levelling feet.
2. Level the washing machine by manually adjusting the levelling feet. The levelling feet can be loosened using the provided spanner.

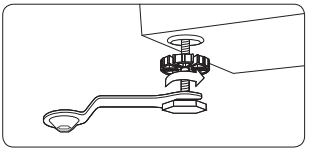

3. When levelling is complete, tighten the nuts using a screwdriver as shown.

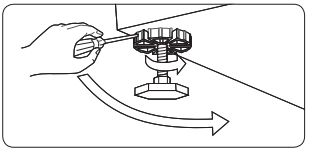

When installing the washing machine, ensure that the power plug, and the water supply and drain hoses are easily accessible.

STEP 4 - Connect the water hose

Connect the water supply hose to the water tap.

1. Remove the **adaptor (A)** from the **water supply hose (B)**.

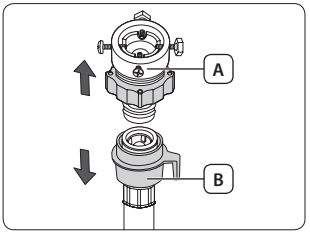

2. Use a Philips screwdriver to loosen four screws on the adaptor.

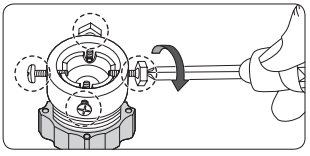

3. Hold the adaptor and turn **part (C)** in the arrow direction to loosen it by 5 mm (*).

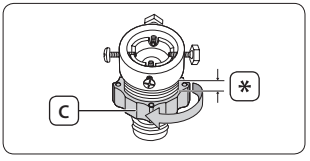

4. Insert the adaptor into the water tap, and tighten the screws while lifting up the adaptor.
5. Turn **part (C)** in the arrow direction to tighten it.

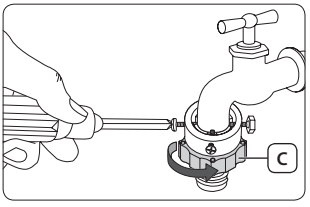

6. While holding down **part (E)**, connect the water supply hose to the adaptor. Then, release **part (E)**. The hose fits into the adaptor with a clicking sound.

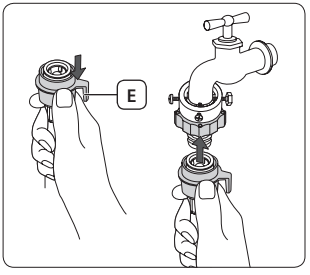

7. Connect the other end of the water supply hose to the inlet valve on the back of the washing machine. Turn the hose clockwise to tighten.

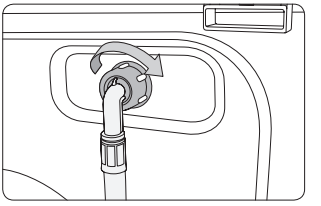

8. Open the water tap and check if there are any leaks around the connection areas. If there are water leaks, repeat the steps above.

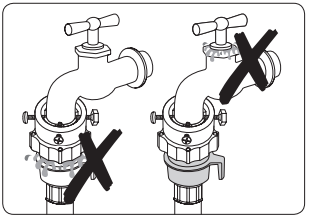

- If using a screw type of water tap, connect the water hose to the water tap as shown.

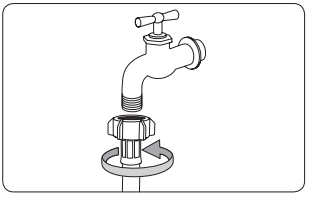

WARNING

Stop using the washing machine if there is a water leak, and contact a local Samsung service centre. Otherwise, this may cause electric shock.

CAUTION

Do not stretch the water supply hose by force. If the hose is too short, replace the hose with a longer, high-pressure hose.

- After connecting the water supply hose to the adaptor, check if it is connected properly by pulling the water supply hose downwards.
- Use a popular type of water taps. If the tap is square-shaped or too big, remove the spacer ring before inserting the tap into the adaptor.

For models with an additional hot water inlet:

1. Connect the red end of the hot water supply hose to the hot water inlet on the back of the machine.
2. Connect the other end of the hot water supply hose to the hot water tap.

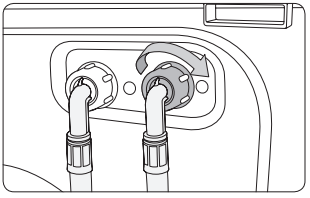

Aqua hose (applicable models only)

The aqua hose alerts users of a risk of water leaks. It senses the water flow and turns red on the centre **indicator (A)** in case of a leak.

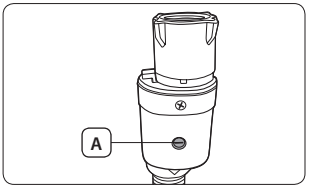

STEP 5 - Connect the drain hose

The drain hose can be positioned in three ways:

1. Press the catches of the **clamp (A)** and insert the drain hose into the clamp.

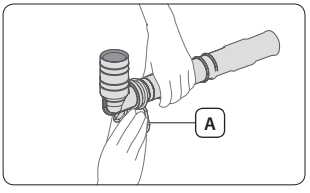

2. Insert the drain hose into the **extension hose (C)** of the washing machine firmly by pressing the catches of the clamp. Then release them to fix the **drain hose (B)**.
3. Fully insert the end of the drain hose into the drain hole.

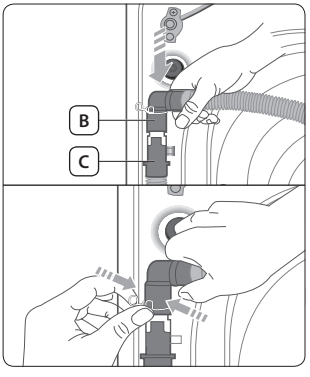

The drain outlet of the washer may be on the left or right depending on the model.

STEP 6 - Position the drain hose

The drain hose can be positioned in three ways:

In a sink drain pipe

The drain pipe must be above the sink siphon so that the end of the hose is at least 60 cm above the floor.

In a drain pipe

The drain pipe should be between 60 cm and 90 cm high (*). It is advisable to use a 65 cm high vertical pipe. Make sure the drain hose is connected to the stand pipe at a slant.

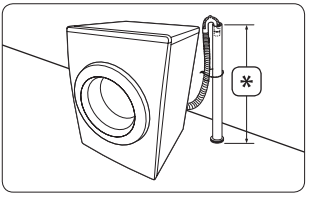

Drain standpipe requirements:

- Minimum diameter of 5 cm
- Minimum carry-away capacity of 60 litres per minute

STEP 7 – Turn on the washing machine

Plug the power cord into a wall socket featuring an AC 220 V / 50 Hz approved electrical outlet protected by a fuse or circuit breaker. Then, press the **POWER** button to turn on the washing machine.

Before you start

Run Calibration (recommended)

Calibration ensures accurate weight detection by the washing machine. Make sure the drum is empty before running Calibration.

1. Press the **POWER** button to turn on the washing machine.
2. Press and hold both the **Temp.** and **Delay End** buttons for 3 seconds.
3. Press the **START/PAUSE** button to activate Calibration mode.
4. The drum spins to the left and right several times. It takes several minutes to complete the Calibration.
5. When the Calibration is complete, the “END” message appears on the display.

If the door is unlocked, the machine turn off automatically.

Laundry guidelines

STEP 1 - Sort

Sort the laundry according to these criteria:

- **Care Label**: Sort the laundry into cottons, mixed fibres, synthetics, silks, wools, and rayon.
- **Colour**: Separate whites from colours.
- **Size**: Mixing different-sized items together in the drum improves the washing performance.
- **Sensitivity**: Wash delicate items separately using an Easy Iron option for pure, new woollen items, curtains, and silk items. Check the labels on the items.

Make sure to check the care label on the clothing, and sort them accordingly before starting the wash.

STEP 2 - Empty pockets

Empty all the pockets of your laundry items

- Metal objects such as coins, pins, and buckles on clothing may damage other laundry items as well as the drum.

Turn clothing with buttons and embroideries inside out

- If pants or jacket zippers are open while washing, the drum may be damaged. Zippers should be closed and fixed with a string.
- Clothing with long strings may become entangled with other clothes. Make sure to tie the strings before starting the wash.

STEP 3 - Use a laundry net

- Brassieres (water washable) must be placed in a laundry net. Metal parts of the brassieres may break through and tear other laundry items.
- Small, light clothing such as socks, gloves, stockings, and handkerchiefs may become caught around the door. Place them inside a fine laundry net.
- Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.

STEP 4- Prewash (if necessary)

Select the Prewash option for the selected course if the laundry is heavily soiled. Do not use the Prewash option when detergent is manually added into the drum.

STEP 5- Determine the load capacity

Do not overload the washing machine. Overloading may cause the washing machine to not wash properly. For the load capacity for the type of clothing, see page **28**.

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended maximum spin cycle speed is 800 rpm, and the load capacity is 2.0 kg or less.

CAUTION

If the laundry is unbalanced and the "**UE**" error code is displayed, redistribute the load. Unbalanced laundry may reduce the spinning performance.

STEP 6- Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

- Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your local area. If you are not sure about the water hardness, contact a local water authority.
- Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse cycle, blocking the drain outlet.

CAUTION

When washing wool using the wool course, use only a neutral liquid detergent. If used with the Wool course, powder detergent may remain on the laundry and discolour the laundry.

Detergent drawer guidelines

The washing machine provides a four-compartment dispenser: two compartments for manual input, and the other two for auto dispensing. With Auto Detergent and Auto Softener enabled, the washing machine dispenses an adequate amount of detergent or fabric softener for each load. See below for details:

A	**Detergent**: Use this to add powder or liquid detergent manually.
B	**Softener**: Use this to add fabric softener manually.
C	**Auto Detergent**: Use liquid detergent only.
D	**Auto Softener**: Use fabric softener only.

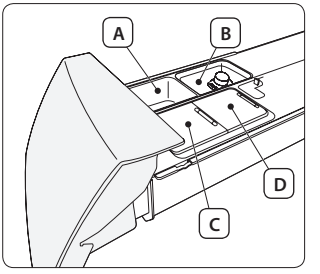

⚠ CAUTION

- Do not open the detergent drawer while the washing machine is operating.
- Do not use the following types of detergent:
  - Tablet or capsule types
  - Ball or net types
- To prevent the compartment clogging, concentrated or highly-enriched agents (fabric softener or detergent) must be diluted with water before being applied.
- Before moving the washing machine, make sure to empty the detergent drawer that might contain detergent and/or fabric softener. The content in the drawer may spill out on the floor.

To refill the detergent or fabric softener

1. Slide open the detergent drawer.
2. Apply an appropriate amount of detergent to the **Auto Detergent compartment (C)**. And apply an appropriate amount of fabric softener to the **Auto Softener compartment (D)** if necessary.
3. Slide the detergent drawer inward. Make sure the door is closed.

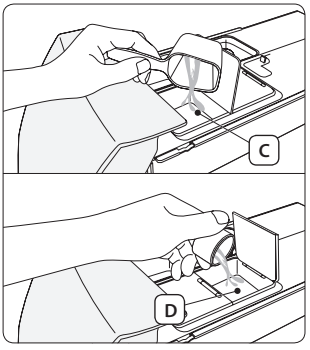

⚠ **CAUTION**

Do not exceed the **max line (*)** which is marked on the compartment.

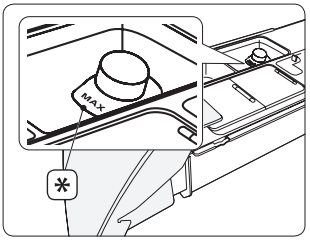

Operations

Control panel

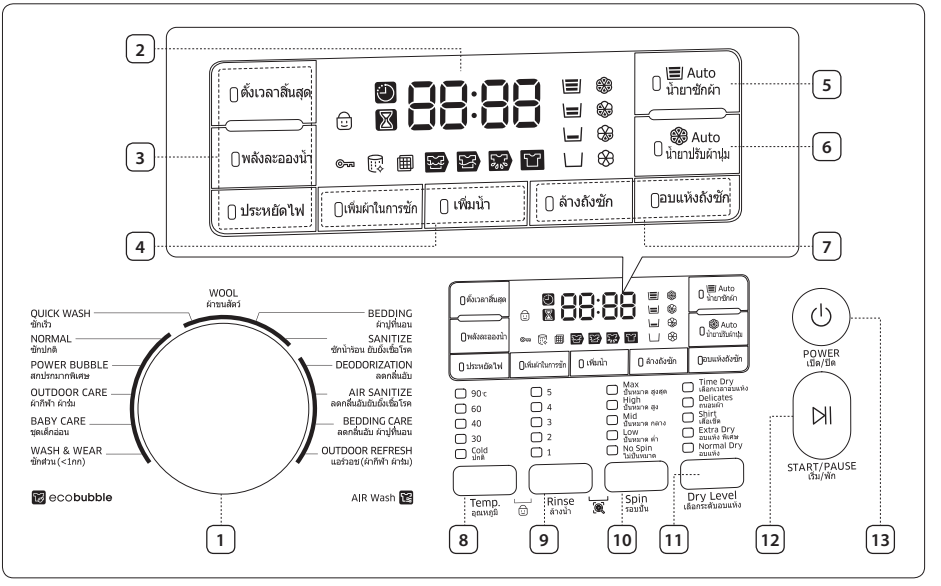

1	**Program Selector**	Select the tumble pattern and spin speed for the cycle.
2	**Display**	Provides instructions and diagnostics while keeping you updated on the program status and time information.
3	**Options**	Select a preferred option for the selected program. Available options are: **Delay End**, **Bubble Shot** and **Energy Saving**
4	**User convenience**	Special functions for user convenience. Available functions are: **Stop & Add** and **Water Plus**
5	**Auto Detergent**	The washing machine dispenses detergent automatically according to the load.
6	**Auto Softener**	The washing machine dispenses fabric softener automatically according to the load.
7	**Maintenance**	Useful for cleaning the drum. Two functions are provided: **Eco Drum Clean** and **Drying Drum**
8	**Temp.**	Press to select a water temperature: Cold Water, 30 ˚C, 40 ˚C, 60 ˚C and 90 ˚C.
9	**Rinse**	Press to add additional rinse cycles. The maximum number of rinse cycles is five.

10	Spin	Press to select a speed for the spin cycle. • **No Spin**: The laundry remains in the drum with no spinning after the final drain.
11	Dry Level	Press to select a dry level: Normal Dry > Extra Dry > Shirt > Delicates > Time Dry (30 min. > 1:00 h > 1:30 h > 2:00 h > 2:30 h) > Disable or Off > Normal Dry • **Normal Dry**: Use to dry laundry such as cotton, underwear, and linen. • **Extra Dry**: Useful to dry heavy garments such as jeans and towel. • **Shirt**: Use this if you want to finish the drying cycle in a moist state, which is ideal for easy ironing. • **Delicate**: Use to dry heat-sensitive garments. This protects the fibers of the garment by drying it at low temperatures. • **Time Dry**: Use to dry the laundry for a specified period of time according to the material, load and moisture.
12	START/PAUSE	Start or stop operation.
13	POWER	Press to turn on/off the washing machine. If the washing machine leaves inactive for more than 10 minutes, it will turn off automatically.

Simple steps to start

Standard steps

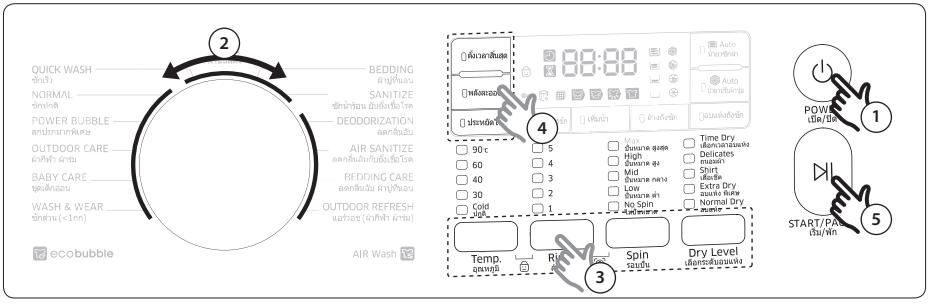

1. Press the **POWER** button to turn on the washing machine.
2. Turn the **Program Selector** to select a program.
3. Change the program settings (**Temp.**, **Rinse**, **Spin** and **Dry Level**) as necessary.
4. Select a preferred option(s) for the program. The corresponding indicator(s) will light up with the estimated running time on the display.
5. Press the **START/PAUSE** button.

Drying only

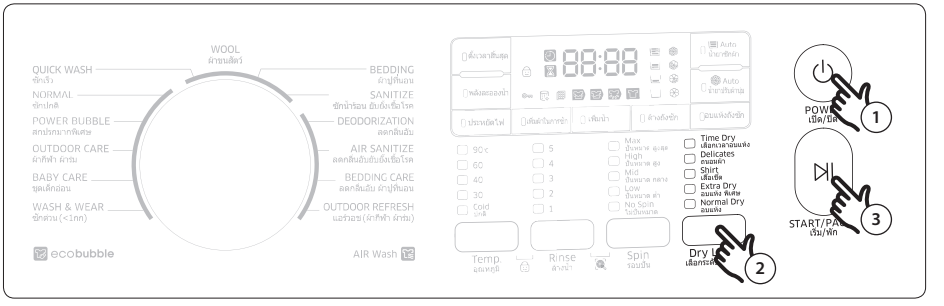

Follow these steps to dry the laundry that has finished washing or just gets wet.

1. Press the **POWER** button to turn on the washing machine.
2. Press the **Dry Level** button repeatedly until a desired dry level is set.
3. Press the **START/PAUSE** button.

To change the course during operation

1. Press the **START/PAUSE** button to stop operation.
2. Select a different program.
3. Press the **START/PAUSE** button again to start the new program.

Program overview

Standard programs

Program	Description & Max load (kg)	
NORMAL	• For average or lightly soiled cottons, bed linens, table linens, underwear, towels, or shirts. • The washing time and the number of rinse cycles are automatically adjusted according to the load.	Max
POWER BUBBLE	• For badly soiled laundry.	17
OUTDOOR CARE	• For outdoor clothes, skiwear, and sportswear that are made of functional materials such as spandex, stretch, and micro-fiber.	3
BABY CARE	• Features a high-temperature wash and extra rinses to ensure that no detergent residues remains.	9
WASH&WEAR	• Specific to quickly wash and dry relatively clean laundry from washing to drying.	1
QUICK WASH	• Specific to less soiled garments with less than a 5.0 kg load. • It takes at least 19 minutes, depending on the conditions such as the water pressure, water hardness, and/or extra options selected. • A recommended amount of detergent is less than 20 g (for a 5.0 kg load)	5
WOOL	• Specific for machine-washable wool for loads less than 4.0 kg. • This features gentle cradling and soaking to protect the wool fibers from shrinkage/distortion. • Neutral detergent is recommended.	4
BEDDING	• For bed spreads, bed sheets, bedding covers, etc. • For best results, wash only a single type of bedding and make sure the load weighs less than 4.0 kg.	4
SANITIZE	• For colorfast fabrics and heavily soiled garments, this program heats the supplied water up to 90 °C to eliminate bacteria. • If you stop running the program while the washing machine is heating the water, the door will remain locked for your safety.	9

AIR Wash programs

AIR Wash refreshes garments through Samsung's unique air-washing technology without the need for water. AIR Wash is not a drying cycle. Use this only for dried garments.

Program	Description & Max load (kg)	
DEODORIZATION	• Removes bad odors from the laundry.	1
AIR SANITIZE	• Removes bad odors and bacteria from the laundry.	1
BEDDING CARE	• Removes bad odors, bacteria, and dust from the laundry.	1
OUTDOOR REFRESH	• This helps restore the water repellency for waterproof breathable garment.	2

CAUTION

Do not use any AIR Wash programs for the following items:

- Heat-sensitive garments made from leather, mink, fur, or silk.
- Underwear trimmed with laces or doll cushions, or trims on dress suits may become loose.
- Clothes trimmed with buttons can break.
- Clothes full of starch may become deformed
- Hard bedding
- Wooden pillows and neck rests
- Pillows or blankets filled with plastic beads or buckwheat
- Electric blankets, furry or bulky blankets
- Latex pillows
- on-waterproof breathable garments (risk of damage to the fibers)

For ripped, scratched or chemically-contaminated garments, the water repellency restoration efficiency can be reduced.

Options

Delay End

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 1 to 19 hours (in 1 hour increments). The hour displayed indicates the time the wash will finish.

1. Turn the **Program Selector** to select a program. Then change the program settings if necessary.
2. Press the **Delay End** button repeatedly until a desired end time is set.
3. Press the **START/PAUSE** button.
   The corresponding indicator turns on with the clock running.
4. To cancel the Delay End, restart the washing machine by pressing the POWER button.

Use case

You want to finish a two-hour course 3 hours later from now. For this, you add the Delay End option to the current course with the 3-hour setting, and press the START/PAUSE button at 2:00 p.m. Then, what happens? The washing machine starts operating at 3:00 p.m., and ends at 5:00 p.m. Provided below is the time line for this example.

Bubble Shot

Bubble Shot creates bubbles inside the drum that help the detergent penetrate into the fabric faster and more effectively. Bubble Shot produces cleaner results in less time and protects the fabric from being damaged.

- Bubble Shot is active by default for all washing programs.
- You cannot deactivate Bubble Shot for POWER BUBBLE, OUTDOOR CARE, WASH&WEAR, WOOL, and QUICK WASH.
- Once a washing program starts, the Bubble Shot cannot be activated/deactivated.
- Do not apply detergent excessively. A specified amount of detergent will generate sufficient bubbles.
- Clean the debris filter regularly to help generate sufficient bubbles.
- The size and quantity of the bubble depends on the detergent and laundry.
- Although bubbles are generated immediately after a program starts, it may take several minutes for them to become visible.

Energy Saving

This changes the program settings to reduce the overall power consumption.
This is not available when you set the water temperature to Cold.

User convenience & maintenance

Stop & Add

This allows you to add/remove laundry even after the wash has started, as long as the corresponding indicator is lit.

Water Plus

This adds extra water immediately before the rinse cycle to improve rinsing effects.

Eco Drum Clean

Clean the drum by removing dirt and bacteria from the drum.

- Run this once every 40 washes with no detergent or bleach applied.
- Make sure the drum is empty with no cleaning agents.

Drying Drum

Clean and dry the drum using the hot air after washing is complete.

Auto Detergent/Auto Softener

1. Press the **Auto Detergent** button to cycle through the following settings:
   Standard > Extra > Disable > Economy
   Press the **Auto Softener** button to cycle through the following settings:
   Standard > Extra > Disable > Economy
2. Hold down both the **Auto Detergent** and **Auto Softener** buttons for 3 seconds. Then, press the **Auto Detergent** or **Auto Softener** button to set the concentration level:
   1 (Normal) > 2 (2X concentration) > 3 (3X concentration)
3. Hold down the **Auto Detergent** and **Auto Softener** buttons again for 3 seconds to confirm your changes.

- If the **Auto Detergent** indicator blinks, refill the **Auto Detergent compartment** with the detergent.
- If the **Auto Softener** indicator blinks, refill the **Auto Softener compartment** with the fabric softener.
- If you select WOOL or OUTDOOR CARE, the **Auto Detergent**/**Auto Softener** will be disabled automatically. However, you can enable the function(s) manually after selecting a program.

Child Lock

- To prevent accidents by children or infants, Child Lock locks all buttons except for the **POWER** button.
- To activate or deactivate Child Lock, hold down the **Temp.** and **Rinse** buttons simultaneously for 3 seconds.

When the Child Lock is activated, it doesn't lock any button until the washing machine starts washing. However, once washing begins, only the **POWER** button is available.

Smart check

To enable this function, you must first download the **Samsung Smart Washer** at the Play Store or the Apple Store, and install it on a mobile device featuring the camera operation.

The Smart Check function has been optimized for:

Galaxy & iPhone series (cannot be supported for some models)

1. Press and hold the **Rinse** and **Spin** buttons simultaneously for 3 seconds to enter the Smart Check mode.
2. The washing machine starts the self-diagnosis procedure, and display an error code if an error is found.
3. Run the **Samsung Smart Washer** app on your mobile device, and tap Smart Check.
4. Present the mobile device to the washing machine's display panel so that the mobile device and the washing machine face each other. Then, the error code will be recognized automatically by the app.
5. When the error code is recognized correctly, the app provides detailed information for the error with further actions.

- The function name, Smart Check, may differ depending on the language.
- If the washing machine reflects light on the display, the app may fail to recognize the error code.
- If the app fails to recognize the Smart Check code consecutively, enter the error code manually onto the app screen.

Maintenance

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Eco Drum Clean

Perform this course regularly to clean the drum and to remove bacteria from it.

1. Press the **POWER** button to turn on washing machine.
2. Press the **Eco Drum Clean** button.
3. Press the **START/PAUSE** button.

The water temperature for Eco Drum Clean is set to 60 °C, which cannot be changed.

CAUTION

Do not use any cleaning agents for cleaning the drum. Chemical residue in the drum deteriorates the washing performance.

Eco Drum Clean reminder

- The Eco Drum Clean reminder appears on the display once every 40 washes. It is advisable to perform the Eco Drum Clean regularly.
- When you first see this reminder, you can ignore the reminder for 6 consecutive times. From the 7th wash, the reminder does not appear. However, it appears again on the second 40th wash.

Drying Drum

Clean and dry the drum using the hot air after washing is complete.

1. Press the **POWER** button to turn on washing machine.
2. Press the **Drying Drum** button.
3. Press the **START/PAUSE** button.

Emergency drain

In case of a power failure, drain the water inside the drum before taking out the laundry.

1. Unplug the power cord of the washing machine from the main socket.
2. Gently press the top area of the filter cover to open.

3. Gently pull out the emergency drain tube.

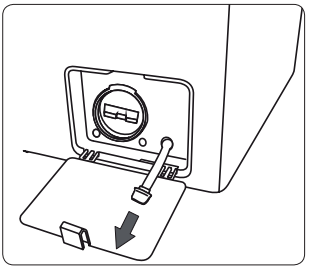

4. While holding the end of the drain tube, open the tube cap.

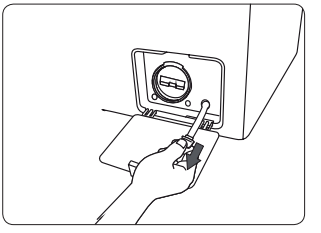

5. Let the water run into a container.
6. Close the tube cap, and reinsert the drain tube.
7. Close the filter cover.

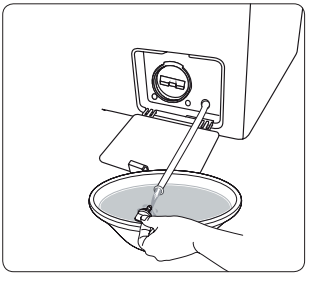

Cleaning

Surface of the washing machine

Use a soft cloth with a nonabrasive household detergent. Do not spray water onto the washing machine.

Debris filter

It is advisable to clean the debris filter 5 or 6 times a year to prevent its clogging. A clogged debris filter may reduce the bubble effect.

1. Turn off the washing machine, and unplug the power cord.
2. Drain the remaining water inside the drum by referring to "**Emergency drain**" on page **35**.
3. Open the filter cover using a coin or key.
4. Turn the debris filter cap to the left, and drain off the remaining water.
5. Remove the debris filter.

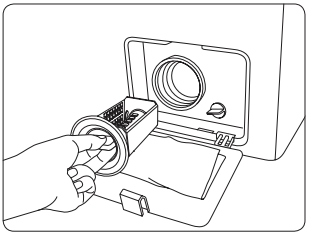

6. Clean the debris filter using soft brushes. Make sure the drain pump propeller inside the filter is unclogged.
7. Reinsert the debris filter, and turn the filter cap to the right.

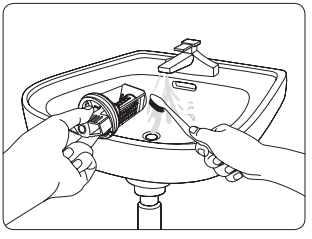

- To open the safety filter cap, push in and turn it anticlockwise. The spring of the cap helps to open the cap.
- To close the safety filter cap, turn it clockwise. The spring makes a rattling sound, which is normal.

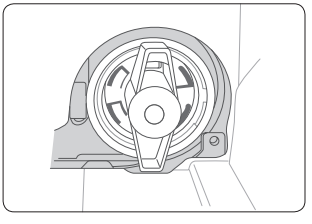

- If the debris filter is clogged, an error code of "**5E**" appears on the screen.

CAUTION

- Make sure the filter cap is closed properly after cleaning the filter. Otherwise, this may cause a leak.
- Make sure the filter is inserted properly after cleaning it. Otherwise, this may cause an operational failure or a leak.

Detergent Drawer

1. While holding down the **release lever (A)** on the inner of the drawer, slide open the drawer.
2. Remove the compartment cover by holding and pulling back **part (B)**.

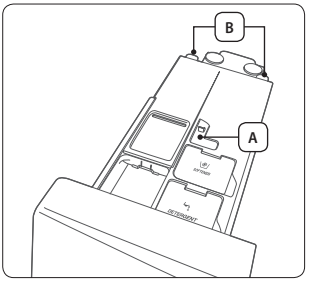

3. Remove the **Liquid softener container (C)** as shown.

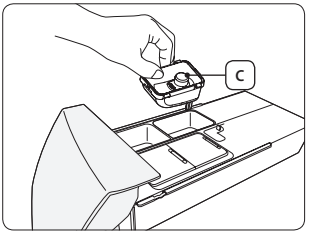

4. Clean the drawer components in flowing water using a soft brush.

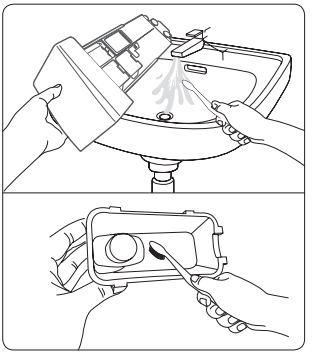

5. Clean the drawer recess using a soft brush.
6. Assemble the compartment cover firmly with the detergent drawer.
7. Slide the drawer inward to close it.

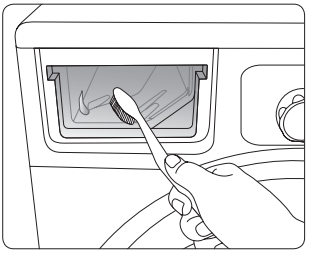

To remove remaining detergent, perform the **QUICK WASH** course with the drum being empty.

Recovery from freezing

The washing machine may freeze when it drops below 0 °C.

1. Turn off the washing machine, and unplug the power cord.
2. Pour warm water over the water tap to loosen the water supply hose.
3. Disconnect the water supply hose, and soak it in warm water.
4. Pour warm water into the drum and leave it for about 10 minutes.
5. Reconnect the water supply hose to the water tap.

If the washing machine still doesn't operate normally, repeat the above steps until it operates normally.

Care against an extended time of disuse

Avoid leaving the washing machine unused for an extended time.

If this is the case, drain the washing machine and unplug the power cord.

1. Turn the Course Selector to select a **QUICK WASH**.
2. Empty the drum, and press **START/PAUSE** button.
3. When the course is complete, close the water tap and disconnect the water supply hose.
4. Turn off the washing machine, and unplug the power cord.
5. Open the door to let air circulate through the drum.

Troubleshooting

Checkpoints

If you encounter a problem with the washing machine, first check the table below and try the suggestions.

Problem	Action
The washing machine won't start.	• Make sure the washing machine is plugged in. • Make sure the door is properly closed. • Make sure the water tap is open. • Press the **START/PAUSE** button again.
Water supply is insufficient, or no water is supplied.	• Open the water tap fully. • Make sure the water supply hose is not frozen. • Make sure the water supply hose is not kinked or clogged. • Clean the filter on the water supply hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
The washing machine vibrates badly or makes noise.	• Make sure the washing machine is installed on a level floor. If the floor is not level, use the levelling feet to adjust the level. • Make sure that the shipping bolts are removed. • Make sure the washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/ or spin.	• Make sure the drain hose is straightened all the way to the drain system. • Make sure the debris filter is not clogged.
The door won't open.	• Press the **START/PAUSE** button to stop the washing machine. • The door stays locked as long as the washing machine is still hot inside after a heating operation. • Deactivate the Child Lock if activated.

If a problem persists, contact a local Samsung service centre.

Information codes

If the washing machine fails to operate, you may see an information code on the screen. Check the table below and try the suggestions.

Problem	Action
dE	• Make sure the door is properly closed. • Make sure laundry is not caught in the door.
4E	• Make sure the water tap is open. • Make sure the washing machine is operating with sufficient water pressure, • Clean the mesh filter as it may be clogged.
5E	• Clean the debris filter as it may be clogged. • Make sure the drain hose is not kinked all the way to the drain system.
UE	• The laundry load is unbalanced. Spread the laundry evenly.
CE/3E	• This is not user-repairable. Contact a local Samsung service centre.

If any information code keeps appearing on the screen, contact a local Samsung service centre.

Specifications

Protecting the environment

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturer's instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

Fabric care chart

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundry problems.

	Resistant material		Do not iron
	Delicate fabric		Can be dry cleaned using any solvent
	Item can be washed at 95 ˚C		Dry Clean
	Item can be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item can be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item can be washed at 30 ˚C		Do not dry clean
	Hand wash only		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry
	Can be ironed at 100 ˚C max		

Specification sheet

TYPE			FRONT LOADING WASHING MACHINE
MODEL NAME			WD17H7*****
DIMENSIONS			W686× D811×H990 (mm)
WATER PRESSURE			50 kPa ~ 800 kPa
WATER VOLUME			86 ℓ
NET WEIGHT			105 kg
WASH AND SPIN CAPACITY			17.0 kg
DRY CAPACITY			9.0 kg
POWER CONSUMPTION	WASHING	220 V	250 W
	WASHING AND HEATING		2200 W
	DRYING		2100 W
	SPIN		600 W
	PUMPING		35 W
PACKAGE WEIGHT		PAPER	1.3 kg
		PLASTIC	1.8 kg
SPIN REVOLUTIONS			1100 rpm

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th/support

DC68-03464F-01

WD17H7*****

เครื่องซักผ้า

คู่มือผู้ใช้

Imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung

SAMSUNG

สารบัญ

ข้อมูลเกี่ยวกับความปลอดภัย 3

สิ่งที่คุณต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย . . . 3
ข้อมูลสำคัญเพื่อความปลอดภัย . . . 3
ข้อควรระวังเพื่อความปลอดภัยที่สำคัญ . . . 4

การติดตั้ง 12

มีชิ้นส่วนใดบ้าง . . . 12
ข้อกำหนดในการติดตั้ง . . . 13
การติดตั้งแบบทีละขั้นตอน . . . 15

ก่อนการเริ่มต้น 20

เรียกใช้การเทียบค่า (แนะนำ) . . . 20
คำแนะนำของผ้า . . . 21
คำแนะนำสำหรับช่องใส่น้ำยาซักผ้า . . . 23

การทำงาน 25

แผงควบคุม . . . 25
ขั้นตอนง่ายๆ ในการเริ่มต้น . . . 27
ภาพรวมของโปรแกรม . . . 28
ตัวเลือก . . . 30
ความสะดวกของผู้ใช้และการดูแลรักษา . . . 31
การตั้งค่า . . . 32
ระบบตรวจสอบอัจฉริยะ . . . 33

การบำรุงรักษา 34

ล้างถังซัก . . . 34
อบแห้งถังซัก . . . 34
ท่อทิ้งน้ำฉุกเฉิน . . . 35
การทำความสะอาด . . . 36
การคืนสภาพจากการเป็นน้ำแข็ง . . . 38
การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน . . . 38

การแก้ไขปัญหา 39

จุดตรวจสอบ . . . 39
รหัสข้อมูล . . . 40

ข้อมูลจำเพาะ 41

การปกป้องสิ่งแวดล้อม . . . 41
ผังการดูแลผ้า . . . 42
ข้อมูลจำเพาะ . . . 43

ข้อมูลเกี่ยวกับความปลอดภัย

ขอแสดงความยินดีกับเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ คู่มือนี้มีข้อมูลที่สำคัญเกี่ยวกับการติดตั้ง การใช้งานและการบำรุงรักษาเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ โปรดสละเวลาเพื่ออ่านคู่มือนี้ เพื่อใช้ประโยชน์สูงสุดจากคุณสมบัติและคุณประโยชน์มากมายของเครื่องซักผ้า

สิ่งที่คุณต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย

โปรดอ่านคู่มือให้ละเอียดเพื่อให้ทราบถึงวิธีใช้อุปกรณ์อย่างปลอดภัยและสามารถใช้คุณลักษณะและการทำงานขั้นสูงต่างๆ อย่างมีประสิทธิภาพ โปรดเก็บคู่มือไว้ในที่ปลอดภัยใกล้กับเครื่อง เพื่อใช้อ้างอิงในอนาคต ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น

คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานเครื่องซักผ้า

เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเครื่องซักผ้าของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอาจอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com

ข้อมูลสำคัญเพื่อความปลอดภัย

ความหมายของสัญลักษณ์และเครื่องหมายในคู่มือผู้ใช้นี้:

⚠	**คำเตือน**: อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บร้ายแรง และ/หรือทรัพย์สินเสียหาย**
⚠	**ข้อควรระวัง**: อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บหรือทำให้สิ่งของเสียหาย**
✎	**หมายเหตุ**

สัญลักษณ์คำเตือนเหล่านี้มีให้เพื่อป้องกันการบาดเจ็บของตัวคุณเองและบุคคลอื่น

โปรดปฏิบัติตามอย่างเคร่งครัด

หลังจากอ่านคู่มือนี้แล้ว โปรดเก็บไว้เพื่อนำมาอ้างอิงในภายหลัง

อ่านคำแนะนำทั้งหมดก่อนที่จะใช้อุปกรณ์

เช่นเดียวกับอุปกรณ์ทุกชนิดที่ใช้ไฟฟ้าและมีชิ้นส่วนที่เคลื่อนไหว อุปกรณ์นี้อาจมีอันตรายได้ ในการใช้อุปกรณ์นี้อย่างปลอดภัย โปรดทำความเข้าใจกับการทำงานและใช้ความระมัดระวังขณะใช้งาน

ข้อควรระวังเพื่อความปลอดภัยที่สำคัญ

คำเตือน: ในการลดความเสี่ยงจากไฟ การระเบิด ไฟฟ้าช็อต หรือการบาดเจ็บขณะใช้อุปกรณ์ โปรดปฏิบัติตาม ข้อควรระวังเพื่อความปลอดภัยต่อไปนี้:

อย่าให้เด็ก (หรือสัตว์เลี้ยง) เล่นบนเครื่องซักผ้าหรือในผลิตภัณฑ์ ประตูผลิตภัณฑ์นั้นไม่สามารถเปิดได้โดยง่ายจากภายใน และเด็กอาจได้รับบาดเจ็บร้ายแรงถ้าติดอยู่ภายใน

อุปกรณ์นี้ไม่เหมาะสำหรับบุคคลที่มีสภาพร่างกาย ประสาทสัมผัสหรือจิตที่ไม่ปกติ รวมถึงเด็กหรือบุคคลที่ขาดประสบการณ์ ความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล โปรดระวังมิให้เด็กเล่นกับอุปกรณ์นี้

โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

สำหรับใช้ในยุโรป: อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล

กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย

ควรจัดวางอุปกรณ์นี้เพื่อให้สามารถเข้าถึงปลั๊กไฟ ก๊อกน้ำและท่อระบายน้ำได้โดยง่าย

สำหรับอุปกรณ์ที่มีช่องระบายอากาศที่ฐาน โปรดอย่าให้พรมปิดกั้นช่องนี้

โปรดใช้ชุดท่อใหม่ที่มาพร้อมกับอุปกรณ์ และไม่ควรใช้ชุดท่อเดิม

ข้อควรระวัง: เพื่อป้องกันอันตรายจากการรีเซ็ตอุปกรณ์ตัดความร้อนโดยไม่ตั้งใจ ห้ามจ่ายไฟให้กับอุปกรณ์นี้ผ่านอุปกรณ์สวิตช์ภายนอก เช่น เครื่องตั้งเวลา หรือต่อกับวงจรที่มีการปิดเปิดสวิตช์เป็นประจำโดยหน่วยงานผู้จ่ายไฟ

ห้ามใช้เครื่องปั่นผ้าแห้งถ้ามีการใช้สารเคมีอุตสาหกรรมเพื่อการทำความสะอาด

ต้องทำความสะอาดที่ดักเศษผ้าบ่อยๆ ถ้าเป็นไปได้

อย่าให้มีเศษผ้าสะสมรอบๆ ถังปั่นผ้าแห้ง (ไม่เกี่ยวข้องกับผลิตภัณฑ์ที่มีการระบายอากาศไปยังนอกอาคาร)

ต้องมีการระบายอากาศอย่างเพียงพอเพื่อป้องกันการไหลย้อนกลับของก๊าซเข้าสู่ห้อง จากอุปกรณ์ที่ใช้เชื้อเพลิงอื่นๆ รวมถึงเปลวเพลิงที่ลุกไหม้อยู่

ห้ามอบผ้าที่ยังไม่ได้ซักในเครื่องอบผ้าแบบหมุน

ผ้าที่เปื้อนสารต่างๆ เช่น น้ำมันปรุงอาหาร อะซีโทน แอลกอฮอล์ น้ำมันเบนซิน น้ำมันก๊าด น้ำยาขจัดรอยเปื้อน ยางสน แวกซ์ และน้ำยาขจัดแวกซ์ ควรซักในน้ำร้อนโดยเพิ่มน้ำยาซักผ้าเพิ่มเติมก่อนที่จะอบแห้งในเครื่องอบผ้า

สิ่งของเช่น ยางโฟม (โฟมลาเท็กซ์) หมวกอาบน้ำ ผ้ากันน้ำ สิ่งที่มีการเคลือบยางด้านหลัง และผ้าหรือหมอนที่มีแผ่นโฟมยาง ไม่ควรอบแห้งในเครื่องอบผ้า

ควรใช้น้ำยาปรับผ้านุ่มและผลิตภัณฑ์ลักษณะเดียวกันตามที่ผู้ผลิตน้ำยาแนะนำเท่านั้น

ส่วนสุดท้ายของเครื่องปั่นผ้าแห้งจะทำงานโดยไม่มีความร้อน (รอบการลดความร้อน) เพื่อให้มั่นใจว่าผ้าอยู่ในอุณหภูมิที่ไม่ทำให้เกิดความเสียหาย

นำสิ่งของออกจากกระเป๋าให้หมด เช่น ไฟแช็คและไม้ขีดไฟ

คำเตือน: ห้ามหยุดถังอบก่อนที่จะสิ้นสุดรอบการอบแห้ง ยกเว้นกรณีที่นำผ้าออกและแผ่กระจายอย่างรวดเร็วเพื่อกระจายความร้อน

อากาศที่ไหลออกจะต้องไม่ระบายออกสู่ช่องที่ใช้สำหรับระบายไอจากอุปกรณ์อื่นที่ใช้แก๊สหรือเชื้อเพลิงอื่นๆ

ต้องไม่ติดตั้งอุปกรณ์ในพื้นที่ซึ่งสามารถล็อคประตูได้ ใช้ประตูเลื่อนหรือประตูที่มีบานพับเปิดออกด้านตรงข้ามกับประตูของเครื่องอบผ้า ในลักษณะที่จะทำให้ไม่สามารถเปิดประตูเครื่องอบผ้าได้ไม่สุด

สำหรับใช้ในยุโรป: อย่าให้เด็กอายุต่ำกว่า 3 ปีเข้าใกล้ ยกเว้นกรณีที่มีผู้ดูแลตลอดเวลา

⚠ คำเตือน: คำเตือนที่สำคัญสำหรับการติดตั้ง

การติดตั้งอุปกรณ์นี้ต้องกระทำโดยช่างเทคนิคที่ได้รับการรับรอง หรือบริษัทผู้ให้บริการ

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด ปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ

อุปกรณ์นี้มีน้ำหนักมาก โปรดใช้ความระมัดระวังเมื่อยก

ต่อสายไฟเข้ากับเต้ารับไฟฟ้า AC 220 V 50 Hz ขึ้นไป และใช้เต้ารับสำหรับอุปกรณ์นี้เพียงอย่างเดียว ห้ามใช้สายไฟสำหรับต่อ

- การใช้เต้ารับไฟฟ้าที่ผนังร่วมกับอุปกรณ์อื่นโดยผ่านสายไฟสำหรับต่อ หรือแถบปลั๊กไฟ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับในข้อมูลจำเพาะของผลิตภัณฑ์ มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้ ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังอย่างแน่นหนา

นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากขั้วของปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง

- ถอดปลั๊กไฟและทำความสะอาดด้วยผ้าแห้ง
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ต่อปลั๊กไฟเข้ากับเต้ารับโดยให้สายไฟพาดไปทางพื้น

- ถ้าคุณต่อปลั๊กไฟกับเต้ารับในทางตรงกันข้าม ลวดนำไฟฟ้าภายในสายไฟอาจเสียหายและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

เก็บวัสดุบรรจุภัณฑ์ทั้งหมดให้พ้นมือเด็กเนื่องจากอาจเป็นอันตรายได้

- ถ้าเด็กนำถุงพลาสติกมาสวมศีรษะ อาจทำให้หายใจไม่ออก

เมื่ออุปกรณ์ ปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ

อุปกรณ์นี้ต้องได้รับการลงกราวด์อย่างเหมาะสม

ห้ามลงกราวด์อุปกรณ์กับท่อก๊าซ ท่อน้ำพลาสติก หรือสายโทรศัพท์

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด หรือปัญหากับผลิตภัณฑ์
- ห้ามต่อปลั๊กไฟฟ้ากับเต้ารับไฟฟ้าที่ไม่ได้ลงกราวด์อย่างถูกต้อง และโปรดตรวจสอบว่าเป็นไปตามข้อกำหนดของท้องถิ่นและของประเทศ

ห้ามติดตั้งอุปกรณ์นี้ใกล้เครื่องทำความร้อน วัตถุไวไฟ

ห้ามติดตั้งอุปกรณ์นี้ในที่ชื้น มีน้ำมัน หรือมีฝุ่นมาก ในตำแหน่งที่ได้รับแสงแดดหรือน้ำ (น้ำฝน) โดยตรง

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่มีอุณหภูมิต่ำ

- น้ำที่แข็งตัวจะทำให้ท่อต่างๆ ระเบิด

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่อาจมีก๊าซรั่วไหล

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามใช้เครื่องแปลงไฟฟ้า

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามดึงหรือหักงอสายไฟมากเกินไป

ห้ามบิดหรือผูกสายไฟเป็นปม

อย่าเกี่ยวสายไฟไว้กับวัตถุที่เป็นโลหะ วางของหนักบนสายไฟ สอดสายไฟไว้ระหว่างสิ่งของ หรือดันสายไฟไว้ในช่องด้านหลังของอุปกรณ์

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามดึงสายไฟเพื่อถอดปลั๊กไฟออกจากเต้ารับ

- ถอดปลั๊กไฟด้วยการจับที่ตัวปลั๊ก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ ข้อควรระวัง: ข้อควรระวังในการติดตั้ง

อุปกรณ์นี้ควรอยู่ในตำแหน่งที่สามารถเอื้อมถึงปลั๊กไฟได้ง่าย

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต หรือเพลิงไหม้เนื่องจากไฟฟ้ารั่ว

ติดตั้งและปรับระดับเครื่องบนพื้นที่มั่นคง สามารถรับน้ำหนักได้

- มิฉะนั้นอาจทำให้มีการสั่นสะเทือนผิดปกติ มีการเคลื่อนที่ เสียงรบกวน หรือมีปัญหากับผลิตภัณฑ์

⚠ คำเตือน: คำเตือนที่สำคัญสำหรับการใช้งาน

ถ้าอุปกรณ์มีน้ำท่วม ให้ตัดไฟฟ้าและการจ่ายน้ำทันที และติดต่อศูนย์บริการใกล้บ้าน

- ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต

ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ ห้ามสัมผัสกับอุปกรณ์หรือสายไฟ

- ห้ามใช้พัดลมไฟฟ้า
- อาจเกิดประกายไฟที่ทำให้ระเบิดหรือเพลิงไหม้

อย่าให้เด็กเล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า นอกจากนี้ เมื่อทิ้งอุปกรณ์ ให้ถอดก้านล็อคประตูเครื่องซักผ้าออก

- ถ้าติดอยู่ภายใน เด็กอาจอาจหายใจไม่ออกจนกระทั่งเสียชีวิต

โปรดนำบรรจุภัณฑ์ (ฟองน้ำ โฟม) ที่ด้านล่างของเครื่องซักผ้าออกก่อนที่จะใช้งาน

ห้ามซักผ้าที่เปื้อนน้ำมันเชื้อเพลิง น้ำมันก๊าด เบนซีน ทินเนอร์ แอลกอฮอล์ หรือสารไวไฟหรือสารระเหยชนิดต่างๆ

- อาจทำให้เกิดไฟฟ้าช็อต ไฟไหม้หรือระเบิดได้

ห้ามเปิดประตูเครื่องโดยใช้แรงขณะที่เครื่องทำงาน (การซัก/อบแห้ง/ปั่นหมาดขณะอุณหภูมิสูง)

- น้ำที่ไหลออกจากเครื่องซักผ้าอาจทำให้ร้อนลวกหรือทำให้พื้นลื่น อาจทำให้เกิดการบาดเจ็บได้
- การใช้แรงเปิดประตูอาจทำให้ผลิตภัณฑ์เสียหายหรือทำให้เกิดการบาดเจ็บ

อย่าสอดมือใต้เครื่องซักผ้าขณะที่เครื่องทำงานอยู่

- อาจทำให้เกิดการบาดเจ็บได้

ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก

- อาจทำให้เกิดไฟฟ้าช็อตได้

ห้ามปิดเครื่องด้วยการถอดปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่

- การต่อปลั๊กไฟเข้ากับเต้ารับไฟฟ้าอีกครั้งอาจทำให้เกิดประกายไฟและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

อย่าปล่อยให้เด็กหรือคนที่ไม่แข็งแรงใช้เครื่องซักผ้าโดยไม่มีบุคคลดูแลอย่างเหมาะสม อย่าให้เด็กเข้าสู่ภายในหรือด้านบนของอุปกรณ์

- อาจทำให้เกิดไฟฟ้าช็อต ร้อนลวกหรือบาดเจ็บได้

โปรดอย่าสอดมือหรือโลหะเข้าใต้เครื่องซักผ้าขณะที่เครื่องกำลังทำงาน

- อาจทำให้เกิดการบาดเจ็บได้

อย่าถอดปลั๊กไฟด้วยการดึงที่สายไฟ ให้จับที่ตัวปลั๊กอย่างมั่นคงและดึงออกจากเต้ารับโดยตรง

- ความเสียหายที่เกิดขึ้นกับสายไฟอาจทำให้เกิดการลัดวงจร เพลิงไหม้ และ/หรือไฟฟ้าช็อต

โปรดอย่าซ่อมแซม ถอดประกอบ หรือดัดแปลงเครื่องด้วยตนเอง

- ห้ามใช้ฟิวส์ (เช่น สายทองแดง ลวดโลหะ ฯลฯ) นอกเหนือจากฟิวส์มาตรฐาน
- เมื่ออุปกรณ์หรือสายไฟเสียหายและจำเป็นต้องซ่อมหรือเปลี่ยนใหม่ โปรดติดต่อศูนย์บริการใกล้บ้านคุณ
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ

เมื่อท่อจ่ายน้ำหลวมหลุดออกจากก๊อกและทำให้น้ำท่วมอุปกรณ์ ให้ถอดปลั๊กไฟ

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ถอดปลั๊กไฟเมื่อไม่ได้ใช้อุปกรณ์เป็นเวลานาน หรือระหว่างพายุฝนฟ้าคะนอง

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ถ้ามีสิ่งแปลกปลอมเข้าเครื่อง ให้ถอดปลั๊กไฟและติดต่อศูนย์บริการ Samsung ที่อยู่ใกล้ที่สุด

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ ข้อควรระวัง: ข้อควรระวังในการใช้งาน

เมื่อเครื่องซักผ้าเปื้อนสิ่งแปลกปลอมเช่น สารซักฟอก สิ่งสกปรก เศษอาหาร ฯลฯ ให้ถอดปลั๊กไฟและทำความสะอาดเครื่องด้วยผ้านุ่มชุบน้ำหมาดๆ

- มิฉะนั้นอาจทำให้ผลิตภัณฑ์เปลี่ยนสี เปลี่ยนรูป เสียหาย หรือเกิดสนิม

กระจกด้านหน้าสามารถแตกได้เมื่อกระแทกแรงๆ โปรดใช้ความระมัดระวังเมื่อใช้เครื่องซักผ้า

- ถ้ากระจกแตก อาจทำให้เกิดการบาดเจ็บได้

หลังจากไม่มีการจ่ายน้ำหรือเมื่อต่อท่อจ่ายน้ำใหม่ ให้ค่อยๆ เปิดก๊อกน้ำช้าๆ

เปิดก๊อกน้ำช้าๆ หลังจากไม่ได้ใช้งานเป็นเวลานาน

- แรงดันอากาศในท่อจ่ายน้ำหรือท่อน้ำประปาอาจทำให้ชิ้นส่วนผลิตภัณฑ์เสียหายหรือทำให้น้ำรั่ว

ถ้าเกิดข้อผิดพลาดในการระบายน้ำระหว่างการทำงาน ให้ตรวจสอบว่ามีปัญหาของการระบายน้ำหรือไม่

- ถ้าใช้เครื่องซักผ้าเมื่อมีน้ำท่วม เนื่องจากปัญหาการระบายน้ำ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ใส่ผ้าในเครื่องซักผ้าโดยระวังอย่าให้ผ้าติดอยู่ที่ประตู

- ถ้าผ้าติดอยู่ที่ประตู อาจทำให้ผ้าเสียหายหรือเครื่องซักผ้าเสียหาย หรือทำให้น้ำรั่ว

ปิดการจ่ายน้ำเมื่อไม่ได้ใช้เครื่องซักผ้า

ตรวจสอบว่าสกรูของข้อต่อท่อจ่ายน้ำนั้นมีการขันไว้อย่างถูกต้อง

- มิฉะนั้นอาจทำให้เกิดความเสียหายแก่ทรัพย์สินหรือเกิดการบาดเจ็บ

โปรดระมัดระวังอย่าให้ซีลยางและกระจกด้านหน้ามีสิ่งแปลกปลอมติดอยู่ (เช่น สิ่งสกปรก เส้นด้าย ผม ฯลฯ)

- ถ้ามีสิ่งแปลกปลอมติดอยู่ในประตู หรือประตูไม่ปิดสนิท อาจทำให้น้ำรั่ว

เปิดก๊อกและตรวจสอบว่าข้อต่อของท่อจ่ายน้ำมีการขันไว้อย่างแน่นหนาแล้วหรือไม่ และไม่มีน้ำรั่ว ก่อนที่จะใช้ผลิตภัณฑ์

- ถ้าสกรูหรือข้อต่อท่อจ่ายน้ำหลวม อาจทำให้น้ำรั่ว

ผลิตภัณฑ์ที่คุณซื้อนี้ได้รับการออกแบบมาสำหรับใช้ในครัวเรือนเท่านั้น
การใช้เพื่อธุรกิจจะถือเป็นการใช้ผิดวัตถุประสงค์ ในกรณีนี้ ผลิตภัณฑ์จะไม่ได้รับความคุ้มครองตามการรับประกันมาตรฐานที่มาจาก Samsung และ Samsung จะไม่มีส่วนรับผิดชอบต่อการทำงานผิดปกติหรือความเสียหายที่เกิดจากการใช้ผิดวัตถุประสงค์ดังกล่าว

อย่ายืนบนอุปกรณ์หรือวางสิ่งของ (เช่น ผ้า เทียนที่จุดไฟแล้ว บุหรี่ที่ติดไฟ จาน สารเคมี วัตถุที่เป็นโลหะ ฯลฯ) บนอุปกรณ์

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ได้รับบาดเจ็บ หรือเกิดปัญหากับผลิตภัณฑ์

ห้ามพ่นสารระเหย เช่น ยาฆ่าแมลงบนพื้นผิวผลิตภัณฑ์โดยตรง

- นอกจากจะเป็นอันตรายต่อมนุษย์แล้ว ยังอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือเกิดปัญหากับผลิตภัณฑ์ได้

อย่าวางสิ่งของที่ทำให้เกิดสนามแม่เหล็กไฟฟ้าใกล้กับเครื่องซักผ้า

- อาจทำให้เกิดการบาดเจ็บเนื่องจากการทำงานผิดปกติได้

น้ำที่ระบายออกระหว่างการซักผ้าด้วยน้ำร้อนหรือโปรแกรมอบผ้านั้นมีความร้อนสูง โปรดอย่าสัมผัสน้ำโดยตรง

- อาจทำให้เกิดการลวกหรือบาดเจ็บได้

ห้ามซัก ปั่น หรืออบแห้งเบาะรองนั่ง เบาะ หรือเสื้อผ้า (*) ที่กันน้ำ ยกเว้นอุปกรณ์ของคุณมีโปรแกรมพิเศษสำหรับซักสิ่งของเหล่านี้
(*): เครื่องนอนขนสัตว์ เสื้อกันฝน เสื้อชูชีพ กางเกงเล่นสกี ถุงนอน ผ้าปิดผ้าอ้อม ชุดกันลม และผ้าคลุมจักรยาน จักรยานยนต์ รถยนต์ ฯลฯ

- อย่าซักเบาะที่หนาและแข็ง แม้ว่าจะมีสัญลักษณ์เครื่องซักผ้าบนป้ายดูแลผ้าก็ตาม อาจทำให้เกิดการบาดเจ็บหรือทำให้เครื่องซักผ้า ผนัง พื้น หรือผ้าเสียหาย เนื่องจากการสั่นสะเทือนมากเกินไป

- อย่าซักพรมปูพื้นหรือพรมเช็ดเท้าที่มีด้านหลังเป็นยางหรือปุ่มยาง ยางด้านหลังอาจหลุดออกและติดอยู่กับด้านในถังซัก และอาจทำให้เกิดการทำงานผิดปกติ เช่น การระบายน้ำไม่ทำงาน

อย่าใช้เครื่องซักผ้าขณะที่ถอดลิ้นซักใส่น้ำยาซักผ้าออก

- อาจทำให้ไฟฟ้าช็อตหรือเกิดการบาดเจ็บเนื่องจากน้ำรั่ว

อย่าสัมผัสภายในของถังซักระหว่างหรือหลังจากการอบแห้ง เนื่องจากจะร้อนจัด

- อาจทำให้เกิดการร้อนลวกได้

โปรดอย่าสอดมือเข้าสู่ช่องใส่น้ำยาซักผ้า

- อาจทำให้เกิดการบาดเจ็บ เนื่องจากมืออาจติดอยู่ในช่องใส่น้ำยาซักผ้า

อย่าวางวัตถุใดๆ (เช่น รองเท้า เศษอาหาร สัตว์) นอกเหนือจากเสื้อผ้าในเครื่องซักผ้า

- อาจทำให้เกิดความเสียหายกับเครื่องซักผ้า หรือเกิดการบาดเจ็บหรือเสียชีวิตในกรณีของสัตว์เลี้ยง เนื่องจากการสั่นสะเทือนมากกว่าปกติ

อย่ากดปุ่มต่างๆ ด้วยของแหลม เช่น หมุด มีด เล็บ ฯลฯ

- อาจทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้

ห้ามซักผ้าที่เปื้อนน้ำมัน ครีม หรือโลชั่นทั่วไปที่ใช้ในร้านดูแลผิวหรือร้านนวด

- อาจทำให้ซีลยางเสื่อมสภาพและทำให้น้ำรั่ว

อย่าทิ้งโลหะ เช่น เข็มกลัดหรือกิ๊บติดผมหรือสารซักฟอกไว้ในถังซักเป็นเวลานาน

- อาจทำให้ถังซักขึ้นสนิม
- หากถังซักเริ่มมีลักษณะเป็นสนิมที่พื้นผิว ให้ใช้สารทำความสะอาด (ไม่เป็นกรดหรือด่าง) กับพื้นผิว และใช้ฟองน้ำทำความสะอาด ห้ามใช้แปรงขนลวดเด็ดขาด

ห้ามใช้สารทำความสะอาดแบบซักแห้งโดยตรงและห้ามซัก ล้าง หรือปั่นหมาดผ้าที่เปื้อนสารซักแห้ง

- อาจทำให้เกิดการติดไฟขึ้นในทันทีเนื่องจากความร้อนของการออกซิเดชันของน้ำมัน

ห้ามใช้น้ำจากอุปกรณ์ทำน้ำร้อน/น้ำเย็น

- อาจทำให้เครื่องซักผ้าเกิดปัญหา

ห้ามใช้สบู่ล้างมือแบบธรรมชาติกับเครื่องซักผ้า

- ถ้ามีการแข็งตัวและสะสมอยู่ในเครื่องซักผ้า อาจทำให้เกิดปัญหากับผลิตภัณฑ์ ทำให้สีเปลี่ยน ขึ้นสนิม หรือทำให้มีกลิ่นอับ

ใส่ถุงเท้าและเสื้อชั้นในลงในถุงซักผ้าและซักร่วมกับผ้าอื่นๆ

ห้ามซักผ้าชิ้นใหญ่เช่นผ้าปูที่นอนในถุงซักผ้า

- มิฉะนั้นอาจเกิดการบาดเจ็บเนื่องจากการสั่นสะเทือนผิดปกติ

ห้ามใช้สารซักฟอกแบบก้อน

- ถ้ามีการสะสมในเครื่อง อาจทำให้เกิดน้ำรั่ว

ตรวจสอบว่าไม่มีสิ่งใดอยู่ในกระเป๋าเสื้อผ้าที่จะซัก

- ของแข็ง ของมีคม เช่น เหรียญ เข็มกลัด ตะปู ตะปูควง หรือก้อนหินอาจทำให้เกิดความเสียหายแก่อุปกรณ์ได้

ห้ามซักผ้าที่มีหัวเข็มขัด กระดุม หรือโลหะหนักติดอยู่

แยกผ้าตามสีโดยแยกผ้าสีตกออกจากผ้าสีไม่ตก และเลือกโปรแกรมซักที่แนะนำ ตลอดจนอุณหภูมิและฟังก์ชันเพิ่มเติม

- อาจทำให้ผ้าสีตกหรือเนื้อผ้าเสียหาย

ระวังอย่าให้นิ้วมือเด็กถูกประตูหนีบเมื่อคุณปิดประตู

- มิฉะนั้นอาจทำให้เกิดการบาดเจ็บ

⚠ คำเตือน: คำเตือนที่สำคัญสำหรับการทำความสะอาด

ห้ามทำความสะอาดอุปกรณ์ โดยฉีดน้ำใส่ตัวเครื่องโดยตรง

ห้ามใช้สารทำความสะอาดที่เป็นกรดรุนแรง

ห้ามใช้น้ำมันเบนซิน, ทินเนอร์ หรือแอลกอฮอล์ เพื่อทำความสะอาดอุปกรณ์

- อาจทำให้สีเปลี่ยน เสื่อมสภาพ เสียหาย เกิดไฟฟ้าช็อตหรือไฟไหม้

ก่อนที่จะทำความสะอาดหรือดูแลรักษาเครื่อง โปรดถอดปลั๊กของเครื่องออกจากแหล่งจ่ายไฟ หรือปิดเครื่องที่ปุ่มเปิด/ปิด

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

การติดตั้ง

โปรดดำเนินการตามคำแนะนำเหล่านี้ด้วยความรอบคอบเพื่อให้แน่ใจว่าสามารถติดตั้งเครื่องซักผ้าได้อย่างถูกต้องและเพื่อป้องกันอุบัติเหตุเมื่อเริ่มซักผ้า

มีชิ้นส่วนใดบ้าง

โปรดตรวจสอบว่าชิ้นส่วนทั้งหมดนี้อยู่ในบรรจุภัณฑ์ของผลิตภัณฑ์ ถ้าคุณพบปัญหากับเครื่องซักผ้าหรือชิ้นส่วน โปรดติดต่อศูนย์บริการลูกค้าของ Samsung ในพื้นที่หรือผู้ขายปลีก

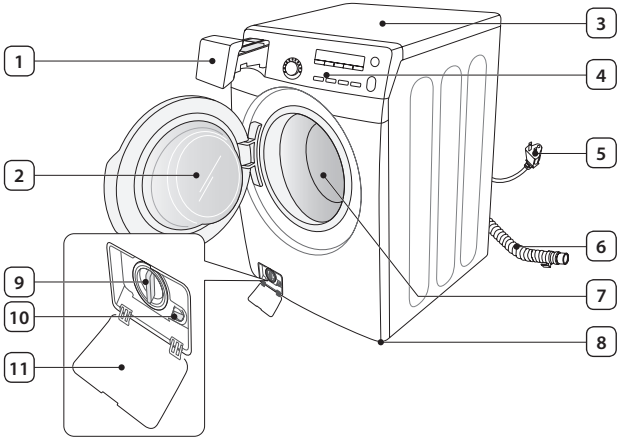

1	ช่องใส่น้ำยาซักผ้า
2	ประตู
3	พื้นผิวส่วนบน
4	แผงควบคุม
5	ปลั๊กไฟ
6	ท่อน้ำทิ้ง
7	ถังซัก
8	ขาตั้งปรับระดับ
9	ตัวกรอง
10	ท่อทิ้งน้ำฉุกเฉิน
11	ที่ปิดตัวกรอง

ประแจ

ฝาครอบน็อต

ท่อน้ำทิ้ง



ตัวนำท่อ

ท่อจ่ายน้ำเย็น

ท่อจ่ายน้ำร้อน



สายรัดท่อ

ฝาครอบน็อต : จำนวนฝาครอบน็อต (3 ถึง 6 ชิ้น) ที่มีให้จะขึ้นอยู่กับแต่ละรุ่น
ท่อจ่ายน้ำร้อน: เฉพาะรุ่นที่ใช้ได้เท่านั้น

ข้อกำหนดในการติดตั้ง

คำเตือนเกี่ยวกับไฟฟ้าและการลงกราวด์

- ต้องใช้ฟิวส์หรือเบรกเกอร์วงจร AC 220 V / 50 Hz
- โปรดใช้วงจรสาขาแยกสำหรับเครื่องซักผ้าโดยเฉพาะ

เพื่อให้แน่ใจว่าลงกราวด์ได้อย่างถูกต้อง เครื่องซักผ้าจึงมาพร้อมกับสายไฟที่มีปลั๊กลงกราวด์สามขาสำหรับใช้กับเต้ารับไฟฟ้าที่ติดตั้งและลงกราวด์อย่างเหมาะสม

โปรดติดต่อช่างไฟฟ้าหรือช่างซ่อมบำรุงที่มีความชำนาญ ถ้าคุณไม่แน่ใจเกี่ยวกับการลงกราวด์

ห้ามดัดแปลงปลั๊กที่มีให้ ถ้าไม่สามารถใช้ร่วมกับเต้ารับได้ โปรดให้ช่างที่มีความชำนาญเป็นผู้ติดตั้งเต้ารับที่เหมาะสม

คำเตือน

- ห้ามใช้สายไฟสำหรับต่อ
- ใช้สายไฟที่มากับเครื่องซักผ้าเท่านั้น
- ห้ามต่อสายกราวด์เข้ากับท่อพลาสติก ท่อก๊าซ หรือท่อน้ำร้อน
- หัวต่อลงกราวด์ที่เชื่อมต่อที่ไม่เหมาะสมอาจทำให้เกิดไฟฟ้าช็อต

การจ่ายน้ำ

แรงดันน้ำที่เหมาะสมสำหรับเครื่องซักผ้าจะอยู่ระหว่าง 50 kPa ถึง 800 kPa แรงดันน้ำที่ต่ำกว่า 50 kPa จะทำให้วาล์วน้ำไม่สามารถปิดได้สนิท หรืออาจใช้เวลานานขึ้นในการเติมน้ำลงในถังซัก ซึ่งทำให้เครื่องซักผ้าปิดระบบ ก๊อกน้ำต้องห่างไม่เกิน 120 ซม. จากด้านหลังของเครื่องซักผ้า เพื่อให้ท่อจ่ายน้ำเข้าที่มีให้นั้นต่อถึงเครื่องซักผ้าได้

ในการลดความเสี่ยงที่จะเกิดการรั่วไหล

- โปรดตรวจสอบว่าก๊อกน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย
- ปิดก๊อกเมื่อไม่ได้ใช้งานเครื่องซักผ้า
- ตรวจสอบรอยรั่วที่ข้อต่อของท่อจ่ายน้ำเข้าเป็นประจำ

ข้อควรระวัง

ก่อนที่จะใช้เครื่องซักผ้าเป็นครั้งแรก โปรดตรวจสอบการเชื่อมต่อวาล์วจ่ายน้ำและก๊อกทั้งหมดเพื่อหารอยรั่ว

การระบายน้ำ

Samsung แนะนำให้ใช้ท่อตั้งมีความสูง 60~90 ซม. ท่อทิ้งน้ำต้องเชื่อมต่อผ่านคลิปท่อไปยังท่อตั้งดังกล่าว และท่อตั้งต้องครอบท่อทิ้งน้ำได้ทั้งหมด

พื้น

เพื่อให้ได้ประสิทธิภาพสูงสุด โปรดติดตั้งเครื่องซักผ้าบนพื้นที่แข็งแรงมั่นคง พื้นไม้อาจต้องมีการเสริมความแข็งแรงเพื่อลดการสั่นสะเทือน และ/หรือการรับน้ำหนักที่ขาดสมดุล พื้นผิวที่ปูพรมและวัสดุอ่อนนุ่มอาจไม่มั่นคงเมื่อเกิดการสั่นสะเทือน และอาจทำให้เครื่องซักผ้าเคลื่อนตัวเล็กน้อยระหว่างรอบการปั่นหมาด

ข้อควรระวัง

ห้ามติดตั้งเครื่องซักผ้าบนที่ยกพื้นหรือโครงสร้างที่ไม่แข็งแรง

อุณหภูมิของน้ำ

ห้ามติดตั้งเครื่องซักผ้าในพื้นที่ซึ่งน้ำอาจเป็นน้ำแข็งได้ เนื่องจากเครื่องซักผ้าจะมีน้ำอยู่ในวาล์วน้ำ ปั๊ม และ/หรือท่อเสมอ น้ำที่แข็งตัวซึ่งหลงเหลืออยู่ในส่วนเชื่อมต่ออาจทำให้สายพาน ปั๊ม และองค์ประกอบอื่นๆ ของเครื่องซักผ้าเสียหาย

การติดตั้งในซุ้มหรือตู้

ระยะห่างต่ำสุดเพื่อให้ทำงานได้อย่างมั่นคง:

ด้านข้าง	25 มม.	ด้านหลัง	50 มม.
ด้านบน	25 มม.	ด้านหน้า	550 มม.

ถ้าติดตั้งทั้งเครื่องซักผ้าและเครื่องอบผ้าไว้ในบริเวณเดียวกัน ด้านหน้าของซุ้มหรือตู้จะต้องมีช่องเปิดที่ไม่มีสิ่งกีดขวางอย่างน้อย 550 มม. เครื่องซักผ้าเพียงอย่างเดียวจะไม่ต้องมีช่องเปิดสำหรับอากาศโดยเฉพาะ

การติดตั้งแบบทีละขั้นตอน

ขั้นตอนที่ 1 - เลือกตำแหน่ง

ข้อกำหนดของตำแหน่ง:

- มีพื้นผิวแข็ง ราบเรียบเสมอกัน โดยไม่มีพรมหรือวัสดุปูพื้นที่อาจปิดกั้นการระบายอากาศ
- พ้นจากแสงแดดโดยตรง
- มีพื้นที่ว่างสำหรับการระบายอากาศและการเดินสายอย่างเพียงพอ
- อุณหภูมิแวดล้อมต้องสูงกว่าจุดเยือกแข็ง (0 °C) อยู่เสมอ
- อยู่ห่างจากแหล่งกำเนิดความร้อนเสมอ

ขั้นตอนที่ 2 – นำหมุดสำหรับการขนส่งออก

แกะบรรจุภัณฑ์ของผลิตภัณฑ์ออกและนำหมุดสำหรับการขนส่งทั้งหมดออก

1. คลายหมุดสำหรับการขนส่งทั้งหมดที่ด้านหลังของเครื่องโดยใช้ประแจที่มีให้

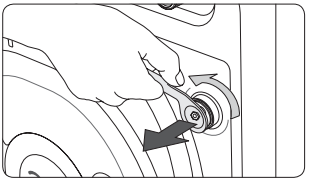

2. นำฝาครอบน็อตที่เป็นพลาสติกที่มีให้ใส่ลงในช่อง
   เก็บหมุดไว้เพื่อใช้ในอนาคต

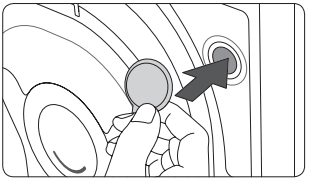

คำเตือน

วัสดุบรรจุภัณฑ์อาจเป็นอันตรายกับเด็ก โปรดทิ้งวัสดุบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม เป็นต้น) ให้พ้นมือเด็ก

ขั้นตอนที่ 3 - ปรับขาตั้งปรับระดับ

1. ค่อยๆ เลื่อนเครื่องซักผ้าเข้าสู่ตำแหน่งที่ติดตั้ง การใช้แรงมากเกินไปอาจทำให้ขาตั้งปรับระดับเสียหาย
2. ปรับระดับเครื่องซักผ้าด้วยการปรับขาตั้งปรับระดับด้วยตนเอง สามารถคลายขาตั้งปรับระดับโดยใช้ประแจที่ให้มา

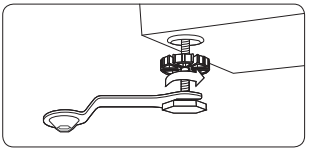

3. เมื่อการปรับระดับเสร็จสิ้น ให้ขันน็อตโดยใช้ไขควงดังที่แสดง

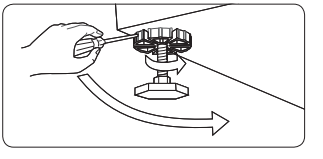

เมื่อติดตั้งเครื่องซักผ้า ให้ตรวจสอบว่าปลั๊กไฟ ท่อจ่ายน้ำและท่อระบายน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย

ขั้นตอนที่ 4 - เชื่อมต่อท่อน้ำ

ต่อท่อจ่ายน้ำเข้ากับก๊อกน้ำ

1. ถอด **ข้อต่อ (A)** ออกจาก **ท่อจ่ายน้ำ (B)**

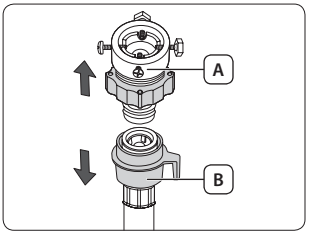

2. ใช้ไขควงฟิลลิปส์เพื่อคลายสกรูสี่ตัวบนข้อต่อ

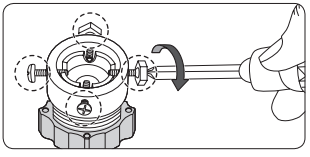

3. จับข้อต่อไว้และหมุน **ชิ้นส่วน (C)** ไปตามทิศทางของลูกศรเพื่อคลายออก 5 มม. (*)

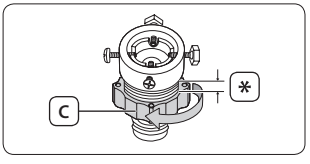

4. ต่อข้อต่อเข้ากับก๊อกน้ำ และขันสกรูให้แน่นพร้อมทั้งยกข้อต่อขึ้น
5. หมุน **ชิ้นส่วน (C)** ไปตามทิศทางของลูกศรเพื่อขันให้แน่น

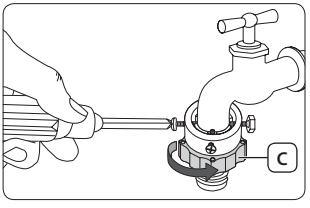

6. ในขณะจับด้านล่างของ **ชิ้นส่วน (E)** ไว้ ให้เชื่อมต่อท่อจ่ายน้ำเข้ากับข้อต่อ จากนั้นให้ปล่อย **ชิ้นส่วน (E)** ท่อจะต่อเข้ากับข้อต่อได้พอดีพร้อมกับมีเสียงคลิก

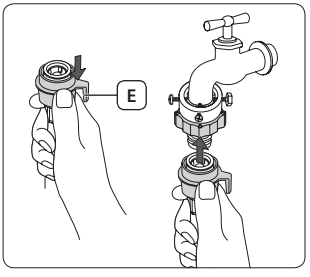

7. ต่อปลายอีกด้านของท่อจ่ายน้ำเข้ากับวาล์วน้ำเข้าที่ด้านหลังของเครื่องซักผ้า หมุนท่อตามเข็มนาฬิกาเพื่อขันให้แน่น

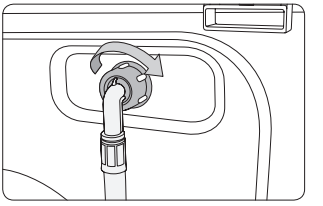

8. เปิดก๊อกน้ำและตรวจสอบว่ามีรอยรั่วรอบบริเวณเชื่อมต่อหรือไม่ ถ้ามีน้ำรั่ว ให้ทำตามขั้นตอนข้างต้นนี้ซ้ำ

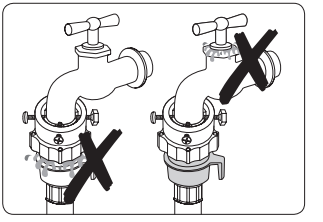

- หากก๊อกน้ำประเภทเกลียว ให้ต่อท่อน้ำเข้ากับก๊อกน้ำตามภาพ

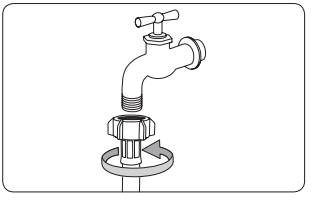

คำเตือน

หยุดการใช้เครื่องซักผ้าถ้ามีน้ำรั่ว และติดต่อศูนย์บริการของ Samsung ในพื้นที่ มิฉะนั้นอาจทำให้เกิดไฟช็อต

ข้อควรระวัง

โปรดอย่าดึงท่อจ่ายน้ำจนตึงโดยใช้แรง หากท่อจ่ายน้ำสั้นเกินไป โปรดเปลี่ยนเป็นท่อแรงดันสูงที่ยาวขึ้น

- หลังจากต่อท่อจ่ายน้ำเข้ากับข้อต่อแล้ว ให้ตรวจสอบว่ามีการเชื่อมต่ออย่างถูกต้องหรือไม่ โดยดึงท่อจ่ายน้ำลง
- โปรดใช้ก๊อกน้ำประเภทที่ใช้งานกันทั่วไป หากก๊อกน้ำเป็นแบบเหลี่ยมหรือใหญ่เกินไป ให้นำวงแหวนออกก่อนที่จะต่อก๊อกน้ำเข้ากับข้อต่อ

สำหรับรุ่นที่มีช่องน้ำร้อนเข้าเพิ่มเติม:

1. ต่อปลายสีแดงของท่อจ่ายน้ำร้อนกับช่องน้ำร้อนเข้าที่ด้านหลังของเครื่องซักผ้า
2. ต่อปลายอีกด้านของท่อจ่ายน้ำร้อนเข้ากับก๊อกน้ำร้อน

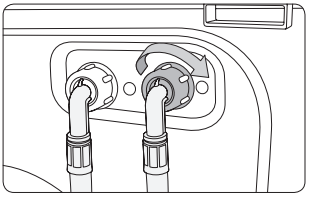

ท่อเตือนน้ำรั่ว (เฉพาะรุ่นที่ใช้ได้เท่านั้น)

ท่อเตือนน้ำรั่วจะเตือนให้ผู้ใช้ทราบถึงความเสี่ยงในการเกิดน้ำรั่ว อุปกรณ์จะรับรู้การไหลของน้ำและเปลี่ยนเป็นสีแดงที่ **สัญลักษณ์ (A)** บริเวณกึ่งกลางในกรณีที่เกิดการรั่ว

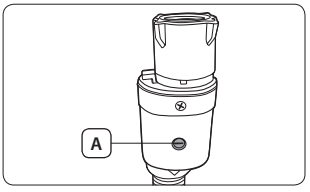

ขั้นตอนที่ 5 - ต่อท่อระบายน้ำ

สามารถติดตั้งท่อระบายน้ำได้สามวิธี:

1. กดสลักของ **แหวนรัด (A)** และใส่ท่อระบายน้ำเข้ากับแหวนรัด

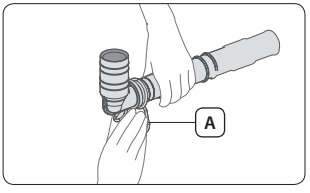

2. ใส่ท่อระบายน้ำเข้ากับ **ท่อต่อ (C)** ของเครื่องซักผ้าให้แน่นหนาโดยกดที่สลักของแหวนรัด จากนั้นปล่อยเพื่อยึด **ท่อระบายน้ำ (B)**
3. ใส่ปลายของท่อระบายน้ำเข้ากับรูระบายน้ำให้สุด

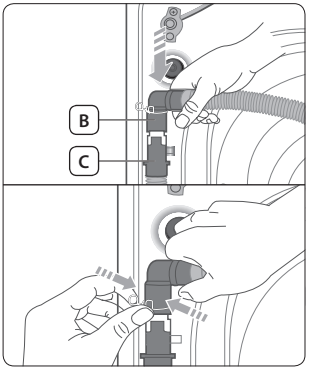

ช่องระบายน้ำของเครื่องซักผ้าอาจอยู่ทางซ้ายหรือทางขวา ทั้งนี้ขึ้นอยู่กับแต่ละรุ่น

ขั้นตอนที่ 6 - วางท่อทิ้งน้ำ

สามารถติดตั้งท่อระบายน้ำได้สามวิธี:

ในท่อระบายน้ำของอ่างล้างมือ

ท่อระบายน้ำจะต้องอยู่เหนือท่อพักของอ่างล้างมือ เพื่อให้ปลายท่ออยู่เหนือพื้นอย่างน้อย 60 ซม.

ในท่อระบายน้ำ

ท่อระบายน้ำควรมีความสูงระหว่าง 60 ซม. ถึง 90 ซม. (*) ขอแนะนำให้ใช้ท่อแนวตั้งที่มีความสูง 65 ซม. โปรดตรวจสอบให้แน่ใจว่าได้ต่อท่อระบายน้ำเข้ากับท่อตั้งในแนวเอียง

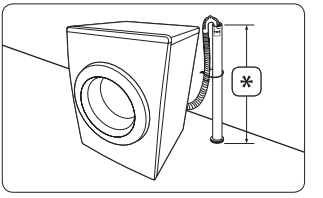

ข้อกำหนดของท่อตั้งสำหรับระบายน้ำทิ้ง:

- เส้นผ่าศูนย์กลางขั้นต่ำ 5 ซม.
- สามารถระบายน้ำได้ขั้นต่ำ 60 ลิตรต่อนาที

ขั้นตอนที่ 7 – เปิดเครื่องซักผ้า

ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนัง ซึ่งมีเต้ารับไฟฟ้า AC 220 V / 50 Hz ที่ผ่านการรับรองและมีการป้องกันด้วยฟิวส์หรือเบรกเกอร์วงจร จากนั้นให้กดปุ่ม **เปิด/ปิด** เพื่อเปิดเครื่องซักผ้า

ก่อนการเริ่มต้น

เรียกใช้การเทียบค่า (แนะนำ)

การเทียบค่า จะช่วยให้เครื่องซักผ้าสามารถตรวจหาน้ำหนักที่ถูกต้อง โปรดตรวจสอบว่าถังซักว่างเปล่าก่อนเรียกใช้ การเทียบค่า

1. กดปุ่ม **เปิด/ปิด** เพื่อเปิดเครื่องซักผ้า
2. กดปุ่ม **อุณหภูมิ** และ **ตั้งเวลาสิ้นสุด** ค้างไว้พร้อมกันเป็นเวลา 3 วินาที
3. กดปุ่ม **เริ่ม/พัก** เพื่อเปิด โหมดปรับตั้ง
4. ถังซักจะหมุนไปทางซ้ายและขวาหลายครั้ง จะต้องใช้เวลาหลายนาทีเพื่อให้ การปรับตั้ง สมบูรณ์
5. เมื่อ การปรับตั้ง สมบูรณ์ ข้อความ “END” จะปรากฏบนหน้าจอ

ถ้าประตูไม่ได้ล็อคไว้ เครื่องจะปิดลงโดยอัตโนมัติ

คำแนะนำของผ้า

ขั้นตอนที่ 1 - คัดแยก

แยกผ้าตามเกณฑ์ดังนี้:

- **ฉลากดูแลผ้า**: แยกผ้าเป็น ผ้าฝ้าย ผ้าเนื้อผสม ผ้าใยสังเคราะห์ ผ้าไหม ผ้าขนสัตว์ และเรยอน
- **สี**: แยกผ้าขาวออกจากผ้าสี
- **ขนาด**: การนำผ้าที่มีขนาดแตกต่างมารวมเข้าไว้ด้วยกันในถังซักจะช่วยเพิ่มประสิทธิภาพในการซัก
- **ความบอบบาง**: ซักผ้าบางแยกต่างหาก โดยใช้ตัวเลือกโปรแกรมรีดง่ายสำหรับผ้าขนสัตว์ใหม่ ผ้าม่าน และผ้าไหม โปรดดูฉลากบนผ้า

โปรดดูฉลากดูแลผ้าบนเสื้อผ้า และแยกเสื้อผ้าตามนั้นก่อนเริ่มต้นซัก

ขั้นตอนที่ 2 - นำสิ่งของออกจากกระเป๋าให้หมด

นำสิ่งของออกจากทุกประเป๋าของเสื้อผ้า

- วัตถุที่เป็นโลหะ เช่น เหรียญ เข็มหมุด และหัวเข็มขัดบนเสื้อผ้าอาจทำให้ผ้าอื่นๆ และถังซักเสียหาย

กลับผ้าที่มีกระดุมและเสื้อผ้าที่มีลายปักเอาด้านในออกมาด้านนอก

- ถ้าไม่รูดซิปกางเกงหรือแจ็คเก็ตปิดไว้ขณะซัก ถังซักอาจเสียหายได้ โปรดรูปซิปปิดไว้
- เสื้อผ้าที่มีเชือกยาวอาจพันกับผ้าชิ้นอื่น โปรดผูกเชือกไว้ก่อนที่จะเริ่มต้นซักผ้า

ขั้นตอนที่ 3 - ใช้ถุงใส่ผ้าสำหรับซัก

- ต้องใส่ชุดชั้นในสตรี (ซักน้ำได้) ลงในถุงใส่ผ้าสำหรับซัก ส่วนที่เป็นโลหะของชุดชั้นในสตรีอาจทำให้วัสดุแตกหักและทำความเสียหายแก่เสื้อผ้าได้
- เสื้อผ้าชิ้นเล็กและมีน้ำหนักเบา เช่น ถุงเท้า ถุงมือ ถุงน่อง และผ้าเช็ดหน้า อาจติดอยู่บริเวณประตู โปรดใส่เสื้อผ้าเหล่านี้ไว้ในถุงใส่ผ้าสำหรับซัก
- อย่าซักถุงใส่ผ้าเพียงอย่างเดียวโดยไม่มีผ้าอื่น เนื่องจากอาจทำให้เกิดการสั่นสะเทือนที่ทำให้เครื่องซักผ้าเคลื่อนที่และอาจทำให้ได้รับบาดเจ็บ

ขั้นตอนที่ 4 - แช่ผ้าก่อนซัก (ถ้าจำเป็น)

สำหรับผ้าฝ้ายที่เปื้อนมาก ให้เพิ่มตัวเลือกแช่ผ้าก่อนซักให้กับโปรแกรมที่เลือกไว้ พร้อมกับใช้ผงซักฟอก

ขั้นตอนที่ 5 - พิจารณาปริมาณผ้าที่จะซัก

ห้ามใส่ผ้าเกินปริมาณที่กำหนด การใส่ผ้ามากเกินไปอาจทำให้เครื่องซักผ้าไม่สามารถซักได้อย่างเหมาะสม โปรดดูหน้า **28** สำหรับข้อมูลเกี่ยวกับปริมาณผ้าแต่ละชนิดที่จะซัก

เมื่อซักชุดเครื่องนอนหรือผ้านวม เวลาในการซักอาจนานขึ้น และประสิทธิภาพในการปั่นหมาดจะลดลง สำหรับชุดเครื่องนอนหรือผ้านวม ความเร็วของรอบปั่นหมาดสูงสุดที่แนะนำคือ 800 รอบต่อนาที และน้ำหนักคือ 2.0 กิโลกรัม หรือน้อยกว่า

ข้อควรระวัง

ถ้าผ้าไม่สมดุล รหัสข้อผิดพลาด “**UE**” จะปรากฏขึ้น ให้กระจายชิ้นผ้าให้เสมอกัน ผ้าที่ไม่สมดุลอาจลดประสิทธิภาพในการปั่น

ขั้นตอนที่ 6 - ใช้ประเภทผงซักฟอกที่เหมาะสม

ประเภทของผงซักฟอกขึ้นอยู่กับประเภทเนื้อผ้า (ผ้าฝ้าย ผ้าใยสังเคราะห์ ผ้าบาง ขนสัตว์) สี อุณหภูมิที่ซัก และระดับความสกปรก โปรดใช้ผงซักฟอกชนิด "ฟองน้อย" ซึ่งได้รับการออกแบบสำหรับเครื่องซักผ้าอัตโนมัติ

- ปฏิบัติตามคำแนะนำของผู้ผลิตผงซักฟอก ตามน้ำหนักของผ้า ระดับความสกปรก และความกระด้างของน้ำในพื้นที่ของคุณ ถ้าคุณไม่แน่ใจเกี่ยวกับความกระด้างของน้ำ โปรดติดต่อผู้ให้บริการน้ำประปาในพื้นที่
- ห้ามใช้ผงซักฟอกที่ที่เกาะตัวหรือแข็ง ผงซักฟอกอาจค้างอยู่ในรอบการซัก ทำให้ช่องระบายน้ำอุดตัน

ข้อควรระวัง

เมื่อซักผ้าขนสัตว์โดยใช้โปรแกรมผ้าขนสัตว์ ให้ใช้น้ำยาซักผ้าที่มีสภาวะเป็นกลางเท่านั้น ถ้าใช้ผงซักฟอกกับโปรแกรมผ้าขนสัตว์ ผงซักฟอกอาจตกค้างอยู่ในผ้าและทำให้ผ้าสีเปลี่ยน

คำแนะนำสำหรับช่องใส่น้ำยาซักผ้า

เครื่องซักผ้ามีช่องจ่ายสี่ช่อง: มีสองช่องสำหรับการเติมด้วยตนเอง และอีกสองช่องสำหรับการจ่ายอัตโนมัติ เมื่อเปิดใช้งานการเติมน้ำยาซักผ้าอัตโนมัติและเติมน้ำยาปรับผ้านุ่มอัตโนมัติ เครื่องซักผ้าจะจ่ายน้ำยาซักผ้าหรือน้ำยาปรับผ้านุ่มในปริมาณที่เหมาะสมกับน้ำหนักผ้าแต่ละครั้ง โปรดดูรายละเอียดด้านล่าง:

A	**น้ำยาซักผ้า**: ใช้เพื่อเติมน้ำยาซักผ้าหรือน้ำยาซักผ้าด้วยตนเอง
B	**น้ำยาปรับผ้านุ่ม**: ใช้เพื่อเติมน้ำยาปรับผ้านุ่มด้วยตนเอง
C	**เติมน้ำยาซักผ้าอัตโนมัติ**: ใช้น้ำยาซักผ้าแบบเหลวเท่านั้น
D	**เติมน้ำยาปรับผ้านุ่มอัตโนมัติ**: ใช้น้ำยาปรับผ้านุ่มเท่านั้น

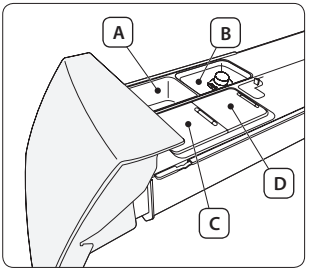

ข้อควรระวัง

- ห้ามเปิดช่องใส่น้ำยาซักผ้าขณะที่เครื่องซักผ้าทำงาน
- ห้ามใช้น้ำยาซักผ้าชนิดต่อไปนี้:
  - ชนิดเม็ดหรือแคปซูล
  - ชนิดบอลหรือตาข่าย
- เพื่อช่วยป้องกันการอุดตันในช่อง ต้องมีการเจือจางสารเข้มข้นหรือประสิทธิภาพสูง (น้ำยาปรับผ้านุ่มหรือน้ำยาซักผ้า) ด้วยน้ำสะอาดก่อนนำไปใช้งาน
- ก่อนที่จะเคลื่อนย้ายเครื่องซักผ้า โปรดตรวจสอบช่องใส่น้ำยาซักผ้าว่าไม่มีน้ำยาซักผ้าหรือน้ำยาปรับผ้านุ่มหลงเหลืออยู่ สิ่งที่อยู่ในช่องใส่อาจหกลงสู่พื้น

ในการเติมน้ำยาซักผ้าหรือน้ำยาปรับผ้านุ่ม

1. เลื่อนเพื่อเปิดช่องใส่น้ำยาซักผ้า
2. เติมน้ำยาซักผ้าในปริมาณที่เหมาะสมใน **ช่องใส่น้ำยาซักผ้าอัตโนมัติ (C)** เติมน้ำยาปรับผ้านุ่มในปริมาณที่เหมาะสมใน **ช่องใส่น้ำยาปรับผ้านุ่ม (D)** ถ้าจำเป็น
3. เลื่อนลิ้นชักน้ำยาซักผ้าเข้าด้านใน ตรวจสอบว่าประตูปิดอยู่

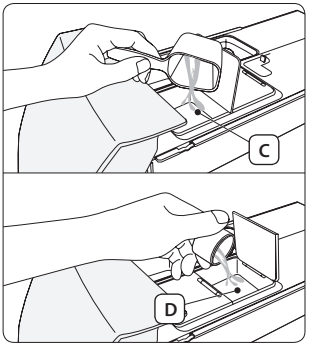

ข้อควรระวัง

อย่าให้เกิน **ขีดสูงสุด (*)** ซึ่งทำเครื่องหมายอยู่ในช่อง

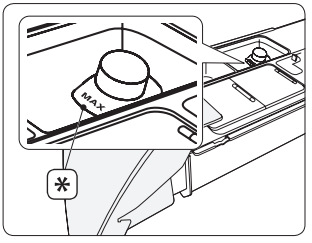

การทำงาน

แผงควบคุม

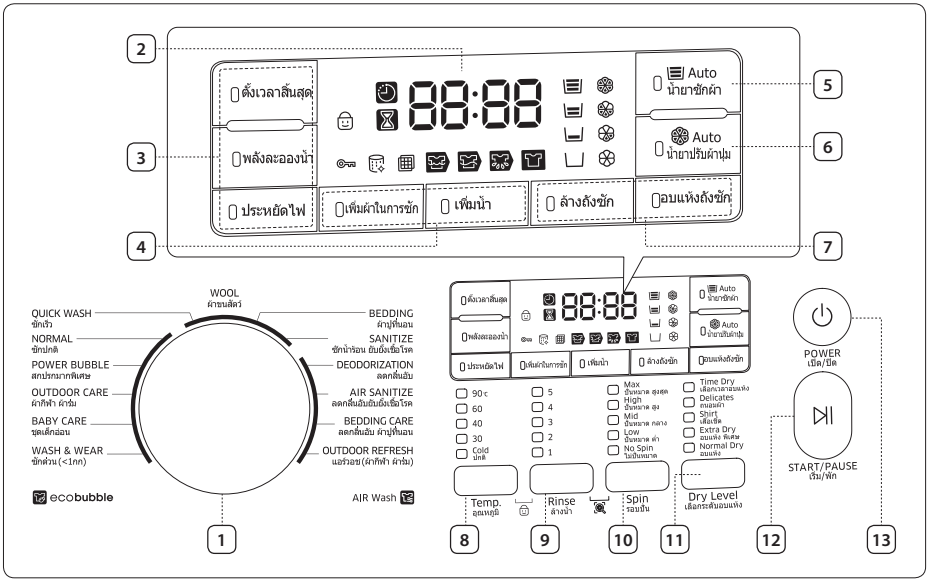

1	**ปุ่มเลือกโปรแกรม**	เลือกรูปแบบการหมุนของถังซักและความเร็วการปั่นหมาดสำหรับรอบการซัก
2	**จอแสดงผล**	จอนี้จะให้คำแนะนำและการวินิจฉัย พร้อมทั้งให้ข้อมูลเกี่ยวกับสถานะของโปรแกรมและข้อมูลเวลา
3	**ตัวเลือก**	เลือกตัวเลือกที่ต้องการสำหรับโปรแกรมที่เลือก ตัวเลือกที่ใช้ได้มีดังนี้: **ตั้งเวลาสิ้นสุด**, **พลังละอองน้ำ** และ **ประหยัดไฟ**
4	**ความสะดวกของผู้ใช้**	ฟังก์ชันพิเศษสำหรับความสะดวกของผู้ใช้ ฟังก์ชันที่ใช้ได้มีดังนี้: **เพิ่มผ้าในการซัก** และ **เพิ่มน้ำ**
5	**Auto น้ำยาซักผ้า**	เครื่องซักผ้าจะจ่ายน้ำยาซักผ้าโดยอัตโนมัติตามน้ำหนักผ้า
6	**Auto น้ำยาปรับผ้านุ่ม**	เครื่องซักผ้าจะจ่ายน้ำยาปรับผ้านุ่มโดยอัตโนมัติตามน้ำหนักผ้า
7	**การบำรุงรักษา**	เหมาะสำหรับการทำความสะอาดถังซัก มีฟังก์ชันสองอย่าง: **ล้างถังซัก** และ **อบแห้งถังซัก**
8	**อุณหภูมิ**	กดเพื่อเลือกอุณหภูมิน้ำ: น้ำเย็น, 30 ˚C, 40 ˚C, 60 ˚C และ 90 ˚C
9	**ล้างน้ำ**	กดปุ่มนี้เพื่อเพิ่มรอบการล้างน้ำ จำนวนรอบการล้างสูงสุดคือห้ารอบ
10	**รอบปั่น**	กดเพื่อเลือกความเร็วสำหรับรอบการปั่นหมาด • **ไม่ปั่นหมาด**: ผ้าจะอยู่ในถังซักโดยไม่มีการปั่นหลังจากทิ้งน้ำสุดท้ายแล้ว

11	**เลือกระดับอบแห้ง**	กดเพื่อเลือกระดับความแห้ง: อบแห้ง > อบแห้ง พิเศษ > เสื้อเชิ้ต > ถนอมผ้า > เลือกเวลาอบแห้ง (30 นาที > 1:00 ชม. > 1:30 ชม. > 2:00 ชม. > 2:30 ชม.) > ปิดการทำงาน > อบแห้ง • **อบแห้ง**: ใช้ตัวเลือกนี้เพื่ออบแห้งผ้าเช่นผ้าฝ้าย ชุดชั้นในและผ้าลินิน • **อบแห้ง พิเศษ**: ใช้ตัวเลือกนี้เพื่ออบแห้งผ้าหนา เช่น ยีนส์หรือผ้าขนหนู • **เสื้อเชิ้ต**: ใช้ตัวเลือกนี้เพื่อสิ้นสุดรอบการอบแห้งโดยที่ผ้าชื้นเล็กน้อย เหมาะสำหรับการรีดผ้า • **ถนอมผ้า**: ใช้อบแห้งผ้าที่ไวต่อความร้อน โปรแกรมนี้จะปกป้องเส้นใยผ้าด้วยการอบแห้งด้วยอุณหภูมิต่ำ • **เลือกเวลาอบแห้ง**: ใช้อบแห้งผ้าในระยะเวลาที่ระบุตามเนื้อผ้า น้ำหนักและความชื้น
12	**เริ่ม/พัก**	เริ่มหรือพักการทำงาน
13	**เปิด/ปิด**	กดเพื่อเปิด/ปิดเครื่องซักผ้า ถ้าไม่มีการดำเนินการใดๆ กับเครื่องซักผ้าเป็นเวลามากกว่า 10 นาที เครื่องจะปิดโดยอัตโนมัติ

ขั้นตอนง่าย ๆ ในการเริ่มต้น

ขั้นตอนมาตรฐาน

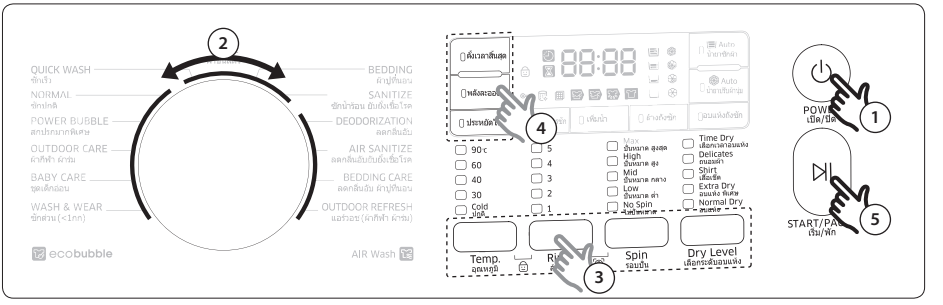

1. กดปุ่ม **เปิด/ปิด** เพื่อเปิดเครื่องซักผ้า
2. หมุน **ปุ่มเลือกโปรแกรม** เพื่อเลือกโปรแกรม
3. เปลี่ยนการตั้งค่าโปรแกรม (**อุณหภูมิ**, **ล้างน้ำ**, **รอบปั่น** และ **เลือกระดับอบแห้ง**) ตามต้องการ
4. เลือกตัวเลือกที่ต้องการสำหรับโปรแกรม สัญญาณสำหรับตัวเลือกจะสว่างขึ้นพร้อมด้วยเวลาทำงานโดยประมาณบนหน้าจอ
5. กดปุ่ม **เริ่ม/พัก**

อบแห้งเท่านั้น

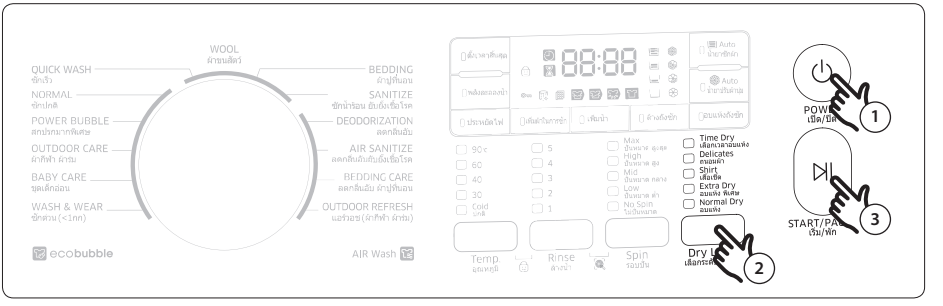

ทำตามขั้นตอนต่อไปนี้เพื่ออบแห้งผ้าที่เพิ่งซักเสร็จหรือเพิ่งเปียก

1. กดปุ่ม **เปิด/ปิด** เพื่อเปิดเครื่องซักผ้า
2. กดปุ่ม **เลือกระดับอบแห้ง** ซ้ำๆ จนได้ระดับการอบแห้งที่ต้องการ
3. กดปุ่ม **เริ่ม/พัก**

ในการเปลี่ยนโปรแกรมระหว่างการทำงาน

1. กดปุ่ม **เริ่ม/พัก** เพื่อหยุดการทำงาน
2. เลือกโปรแกรมอื่น
3. กดปุ่ม **เริ่ม/พัก** อีกครั้งเพื่อเริ่มโปรแกรมอื่น

ภาพรวมของโปรแกรม

โปรแกรมมาตรฐาน

โปรแกรม	คำอธิบาย & น้ำหนักสูงสุด (กก.)	
ซักปกติ	• สำหรับผ้าฝ้ายทั่วไปหรือสกปรกน้อย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าเช็ดตัว เชิ้ต ฯลฯ • เวลาในการซักและจำนวนรอบการล้างน้ำจะมีการปรับโดยอัตโนมัติตามน้ำหนัก	สูงสุด
สกปรกมากพิเศษ	• สำหรับผ้าสกปรกมาก	17
ผ้ากีฬา ผ้าร่ม	• สำหรับเสื้อผ้าที่สวมใส่กลางแจ้ง ชุดเล่นสกี และชุดเล่นกีฬาที่ทำมาจากวัสดุสำหรับใช้งาน เช่น สแปนเด็กซ์ ผ้ายืด และไมโครไฟเบอร์	3
ชุดเด็กอ่อน	• การซักด้วยอุณหภูมิสูงและล้างน้ำมากเป็นพิเศษช่วยให้มั่นใจว่าจะไม่มีน้ำยาซักผ้าหลงเหลืออยู่	9
ซักด่วน (<1กก)	• ใช้สำหรับการซักและอบแห้งผ้าที่ค่อนข้างสะอาดอย่างรวดเร็วจากการซักไปยังการอบแห้ง	1
ซักเร็ว	• สำหรับเสื้อผ้าที่เปื้อนน้อย มีน้ำหนักผ้าน้อยกว่า 5.0 กก. • ใช้เวลาอย่างน้อย 19 นาที ทั้งนี้จะขึ้นอยู่กับสภาพการทำงาน เช่น แรงดันน้ำ ความกระด้างของน้ำ และ/หรือตัวเลือกพิเศษที่เลือกไว้ • ปริมาณน้ำยาซักผ้าที่แนะนำคือน้อยกว่า 20 กรัม (สำหรับน้ำหนักผ้า 5.0 กก.)	5
ผ้าขนสัตว์	• เหมาะสำหรับผ้าขนสัตว์ที่ซักด้วยเครื่องได้ มีน้ำหนักผ้าน้อยกว่า 4.0 กก. • โปรแกรมนี้มีการหมุนและการแช่ที่นุ่มนวลเพื่อป้องกันเส้นใยผ้าขนสัตว์เกิดการหดตัว/ผิดรูป • ขอแนะนำให้ใช้น้ำยาซักผ้าที่มีฤทธิ์เป็นกลาง	4
ผ้าปูที่นอน	• สำหรับผ้าปูที่นอน ผ้าคลุมเตียง หรือปลอกผ้านวม ฯลฯ • เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด ให้ซักผ้าปูที่นอนเพียงประเภทเดียวเท่านั้นและน้ำหนักผ้าต้องไม่เกิน 4.0 กก.	4
ซักน้ำร้อน ยับยั้งเชื้อโรค	• สำหรับผ้าสีไม่ตกและผ้าที่สกปรกมาก โปรแกรมนี้จะใช้น้ำร้อนสูงสุด 90 °C เพื่อขจัดแบคทีเรีย • ถ้าคุณหยุดการทำงานของโปรแกรมขณะที่เครื่องซักผ้าทำน้ำร้อน ประตูจะล็อคอยู่เพื่อความปลอดภัย	9

โปรแกรม AIR Wash

ฟังก์ชัน AIR Wash จะช่วยเติมความสดชื่นให้กับผ้าผ่านเทคโนโลยีการซักด้วยพลังลมที่เป็นเอกลักษณ์ของ Samsung โดยไม่จำเป็นต้องใช้น้ำ AIR Wash ไม่ใช่โปรแกรมอบแห้ง โปรดใช้สำหรับผ้าแห้งเท่านั้น

โปรแกรม	คำอธิบาย & น้ำหนักสูงสุด (กก.)	
ลดกลิ่นอับ	• ขจัดกลิ่นอับในผ้า	1
ลดกลิ่นอับยับยั้งเชื้อโรค	• ขจัดกลิ่นอับและแบคทีเรียในผ้า	1
ลดกลิ่นอับ ผ้าปูที่นอน	• ขจัดกลิ่นอับ แบคทีเรียและฝุ่นจากผ้า	1
แอร์วอช (ผ้ากีฬา ผ้าร่ม)	• โปรแกรมนี้จะช่วยคืนคุณสมบัติกันน้ำสำหรับผ้าที่ระบายอากาศและกันน้ำได้	2

ข้อควรระวัง

ห้ามใช้โปรแกรม AIR Wash กับเสื้อผ้าต่อไปนี้:

- ผ้าที่ต้องระวังเรื่องความร้อน ทำจากหนัง มิงค์ ขนเฟอร์ ไหม ฯลฯ
- ชุดชั้นในที่มีขอบเป็นลูกไม้ หมอนตุ๊กตา และขอบของชุดอาจหลุดออกมา
- ผ้าที่มีการประดับด้วยกระดุมซึ่งสามารถแตกได้
- เสื้อผ้าที่มีการลงแป้งอาจผิดรูป
- เครื่องนอนแบบแข็ง
- หมอนและที่รองคอแบบไม้
- หมอนหรือผ้าห่มที่มีไส้เป็นเม็ดพลาสติกหรือเปลือกข้าวสาลี
- ผ้าห่มไฟฟ้า ผ้าห่มขนยาวหรือขนาดใหญ่
- หมอนยาง
- ผ้าที่ระบายอากาศและกันน้ำได้ (เสี่ยงที่จะทำให้เส้นใยผ้าเสียหาย)

สำหรับผ้าที่ฉีกขาด ถูกขูดขีดหรือปนเปื้อนสารเคมี ประสิทธิภาพของการคืนคุณสมบัติกันน้ำอาจจะลดลง

ตัวเลือก

ตั้งเวลาสิ้นสุด

คุณสามารถกำหนดให้เครื่องซักผ้าเสร็จในเวลาอื่นโดยอัตโนมัติ โดยเลือกได้ตั้งแต่ 1 ถึง 19 ชั่วโมง (เพิ่มได้ครั้งละ 1 ชั่วโมง) จำนวนชั่วโมงที่แสดงนั้นเป็นเวลาที่รอบการซักจะสิ้นสุดลง

1. หมุน **ปุ่มเลือกโปรแกรม** เพื่อเลือกโปรแกรม จากนั้นเปลี่ยนการตั้งค่าโปรแกรมตามความจำเป็น
2. กดปุ่ม **ตั้งเวลาสิ้นสุด** ซ้ำๆ เพื่อตั้งเวลาสิ้นสุดตามต้องการ
3. กดปุ่ม **เริ่ม/พัก**

   สัญญาณการทำงานจะสว่างและนาฬิกาจะเริ่มเดิน
4. ในการยกเลิกการตั้งเวลาสิ้นสุด ให้เริ่มต้นเครื่องซักผ้าด้วยการกดปุ่มเปิด/ปิด

กรณีการใช้งาน

ในอีก 3 ชั่วโมง คุณต้องการโปรแกรมซักสองชั่วโมงดำเนินการเสร็จ เพื่อให้มีการทำงานดังนี้ คุณจึงเพิ่มตัวเลือก ตั้งเวลาสิ้นสุด ให้กับโปรแกรมปัจจุบันที่มีการตั้งค่า 3 ชั่วโมง และกดปุ่ม เริ่ม/พัก เมื่อเวลา 14:00 น. จากนั้นจะเกิดอะไรขึ้น เครื่องซักผ้าเริ่มจะทำงานในเวลา 15:00 น. และสิ้นสุดในเวลา 17:00 น. ตามตัวอย่างช่วงเวลาด้านล่างนี้

พลังละอองน้ำ

พลังละอองน้ำ จะสร้างฟองภายในถังซักซึ่งจะช่วยให้น้ำยาซักผ้าเข้าถึงเนื้อผ้าได้เร็วและมีประสิทธิภาพยิ่งขึ้น พลังละอองน้ำ จะให้ผลการซักที่สะอาดยิ่งขึ้นโดยใช้เวลาน้อยลง และถนอมเนื้อผ้าไม่ให้เกิดความเสียหาย

- พลังละอองน้ำ จะเปิดใช้งานโดยค่าเริ่มต้นสำหรับทุกโปรแกรมซัก
- คุณไม่สามารถปิดการทำงานของ พลังละอองน้ำ สำหรับ สกปรกมากพิเศษ, ผ้ากีฬา ผ้าร่ม, ซักด่วน (<1nn), ผ้าขนสัตว์ และ ซักเร็ว
- เมื่อโปรแกรมซักเริ่มต้น จะไม่สามารถเปิดหรือปิด พลังละอองน้ำ ได้อีก
- โปรดอย่าใช้น้ำยาซักผ้าปริมาณมากเกินไป การใช้น้ำยาซักผ้าในปริมาณที่ระบุไว้จะให้ฟองอย่างเพียงพอ
- ทำความสะอาดตัวกรองเศษด้ายเป็นประจำเพื่อช่วยให้มีฟองอย่างเพียงพอ
- ขนาดและปริมาณของฟองจะขึ้นอยู่กับน้ำยาซักผ้าและผ้าที่ซัก
- แม้ว่าจะมีการสร้างฟองทันทีเมื่อเริ่มต้นการซัก แต่อาจต้องใช้เวลาหลายนาทีก่อนที่จะมองเห็นฟองได้

ประหยัดไฟ

โหมดนี้จะเปลี่ยนการตั้งค่าโปรแกรมเพื่อประหยัดการใช้พลังงานโดยรวม

ไม่สามารถใช้ได้เมื่อคุณตั้งค่าอุณหภูมิน้ำเป็นปกติ

ความสะดวกของผู้ใช้และการดูแลรักษา

เพิ่มผ้าในการซัก

ใช้สำหรับเพิ่ม/นำผ้าออกหลังจากที่การซักเริ่มต้นแล้ว ในขณะที่สัญญาณการทำงานนั้นยังคงสว่างอยู่

เพิ่มน้ำ

เพิ่มน้ำทันทีก่อนรอบการล้างน้ำเพื่อปรับปรุงประสิทธิภาพของการล้างน้ำ

ล้างถังซัก

ทำความสะอาดถังซักด้วยการขจัดคราบสกปรกและแบคทีเรียออกจากถังซัก

- ดำเนินการหนึ่งครั้งเมื่อซักครบ 40 ครั้งโดยไม่ต้องใส่น้ำยาซักผ้าหรือสารฟอกขาว
- ตรวจสอบว่าถังซักว่างเปล่าโดยไม่มีสารทำความสะอาดอยู่

อบแห้งถังซัก

ทำความสะอาดและอบแห้งถังซักโดยใช้อากาศร้อนหลังจากการซักเสร็จสิ้น

การตั้งค่า

น้ำยาซักผ้า/น้ำยาปรับผ้านุ่มอัตโนมัติ

1. กดปุ่ม **Auto น้ำยาซักผ้า** เพื่อเลือกการตั้งค่าดังต่อไปนี้:

   มาตรฐาน > พิเศษ > ปิดการทำงาน > ประหยัด

   กดปุ่ม **Auto น้ำยาปรับผ้านุ่ม** เพื่อเลือกการตั้งค่าดังต่อไปนี้:

   มาตรฐาน > พิเศษ > ปิดการทำงาน > ประหยัด
2. กดปุ่ม **Auto น้ำยาซักผ้า** และ **Auto น้ำยาปรับผ้านุ่ม** ค้างไว้พร้อมกัน 3 วินาที จากนั้นกดปุ่ม **Auto น้ำยาซักผ้า** หรือ **Auto น้ำยาปรับผ้านุ่ม** เพื่อตั้งค่าระดับความเข้มข้น:

   1 (ปกติ) > 2 (2X ความเข้มข้น) > 3 (3X ความเข้มข้น)
3. กดปุ่ม **Auto น้ำยาซักผ้า** และ **Auto น้ำยาปรับผ้านุ่ม** ค้างไว้พร้อมกัน 3 วินาทีอีกครั้งเพื่อยืนยันการเปลี่ยนแปลง

- ถ้าสัญญาณ **Auto น้ำยาซักผ้า** กะพริบ ให้เติม **ช่องใส่น้ำยาซักผ้า** ด้วยน้ำยาซักผ้า
- ถ้าสัญญาณ **Auto น้ำยาปรับผ้านุ่ม** กะพริบ ให้เติม **ช่องใส่น้ำยาปรับผ้านุ่ม** ด้วยน้ำยาปรับผ้านุ่ม
- ถ้าคุณเลือก ผ้าขนสัตว์ หรือ ผ้ากีฬา ผ้าร่ม **Auto น้ำยาซักผ้า/Auto น้ำยาปรับผ้านุ่ม** จะถูกปิดใช้งานโดยอัตโนมัติ แต่คุณสามารถเปิดใช้งานฟังก์ชันด้วยตนเองหลังจากที่เลือกโปรแกรม

ล็อคป้องกันเด็ก

- เพื่อเป็นการป้องกันการเกิดอุบัติเหตุกับเด็ก ล็อคป้องกันเด็ก จะล็อคทุกปุ่ม ยกเว้นปุ่ม **เปิด/ปิด**
- ในการใช้ ล็อคป้องกันเด็ก ให้กดปุ่ม **อุณหภูมิ** และ **ล้างน้ำ** ไว้พร้อมกัน 3 วินาที

เมื่อ ล็อคป้องกันเด็ก ทำงาน จะไม่ล็อคปุ่มใดๆ จนกว่าเครื่องซักผ้าจะเริ่มทำงาน แต่เมื่อการซักเริ่มต้นขึ้นแล้ว จะมีเพียงปุ่ม **เปิด/ปิด** เท่านั้นที่ใช้ได้

ระบบตรวจสอบอัจฉริยะ

หากต้องการเปิดใช้งานฟังก์ชันนี้ ขั้นแรก คุณต้องดาวน์โหลด **Samsung Smart Washer** ที่ Play Store หรือ Apple Store และติดตั้งในอุปกรณ์เคลื่อนที่ซึ่งมีกล้อง

ฟังก์ชัน ระบบตรวจสอบอัจฉริยะ ได้รับการปรับปรุงประสิทธิภาพสำหรับ:

Galaxy และ iPhone ซีรี่ส์ (อาจไม่สนับสนุนในบางรุ่น)

1. กดปุ่ม **ล้างน้ำ** และ **รอบปั่น** พร้อมกันเป็นเวลา 3 วินาทีเพื่อเข้าสู่โหมด ระบบตรวจสอบอัจฉริยะ
2. เครื่องซักผ้าจะเรียกใช้การวินิจฉัยด้วยตนเองในพื้นหลัง และแสดงรหัสข้อผิดพลาดถ้าพบข้อผิดพลาด
3. เรียกใช้แอปพลิเคชั่น **Samsung Smart Washer** ในอุปกรณ์เคลื่อนที่ และแตะ ระบบตรวจสอบอัจฉริยะ
4. ถืออุปกรณ์เคลื่อนที่ซ่อกับแผงจอแสดงผลของเครื่องซักผ้า โดยหันด้านหน้าของอุปกรณ์เคลื่อนที่เข้าหาเครื่องซักผ้า จากนั้น แอปพลิเคชั่นจะรับรู้รหัสข้อผิดพลาดโดยอัตโนมัติ
5. เมื่อรับรู้รหัสข้อผิดพลาดได้อย่างถูกต้อง แอปพลิเคชั่นจะแสดงข้อมูลโดยละเอียดสำหรับข้อผิดพลาด พร้อมกับวิธีการดำเนินการต่อไป

- ชื่อฟังก์ชัน ระบบตรวจสอบอัจฉริยะ อาจแตกต่างกันไปในแต่ละภาษา
- ถ้าเครื่องซักผ้ามีไฟสะท้อนบนจอแสดงผล แสดงว่าแอปพลิเคชั่นอาจไม่สามารถรับรู้รหัสข้อผิดพลาด
- ถ้าแอปพลิเคชั่นไม่รับรู้รหัสของ ระบบตรวจสอบอัจฉริยะ ให้ป้อนรหัสข้อผิดพลาดด้วยตนเองลงในหน้าจอของแอปพลิเคชั่น

การบำรุงรักษา

โปรดรักษาให้เครื่องซักผ้าสะอาดอยู่เสมอเพื่อป้องกันประสิทธิภาพลดลงและเพื่อให้มีอายุการใช้งานที่ยาวนาน

ล้างถังซัก

โปรดใช้โปรแกรมนี้เป็นประจำเพื่อล้างถังซักและกำจัดแบคทีเรียออก

1. กดปุ่ม **เปิด/ปิด** เพื่อเปิดเครื่องซักผ้า
2. กดปุ่ม **ล้างถังซัก**
3. กดปุ่ม **เริ่ม/พัก**

อุณหภูมิของน้ำสำหรับ ล้างถังซัก มีการตั้งค่าไว้ที่ 60˚C ซึ่งจะไม่สามารถเปลี่ยนแปลงได้

ข้อควรระวัง

โปรดอย่าใช้สารทำความสะอาดเพื่อทำความสะอาดถังซัก สารเคมีตกค้างในถังซักจะทำให้ประสิทธิภาพในการซักลดลง

การเตือนของโปรแกรมล้างถังซัก

- การเตือนของโปรแกรม ล้างถังซัก จะปรากฏบนหน้าจอหลักหนึ่งครั้งเมื่อซักครบ 40 ครั้ง ขอแนะนำให้ใช้โปรแกรม ล้างถังซัก เป็นประจำ
- เมื่อคุณเห็นการเตือนนี้เป็นครั้งแรก คุณสามารถไม่รับการเตือนได้ 6 ครั้งติดต่อกัน ตั้งแต่การซักครั้งที่ 7 เป็นต้นไป การแจ้งเตือนจะไม่ปรากฏอีก แต่จะปรากฏอีกครั้งเมื่อซักครบ 40 ครั้งเป็นรอบที่สอง

อบแห้งถังซัก

ทำความสะอาดและอบแห้งถังซักโดยใช้อากาศร้อนหลังจากการซักเสร็จสิ้น

1. กดปุ่ม **เปิด/ปิด** เพื่อเปิดเครื่องซักผ้า
2. กดปุ่ม **อบแห้งถังซัก**
3. กดปุ่ม **เริ่ม/พัก**

ท่อทิ้งน้ำฉุกเฉิน

ในกรณีที่เกิดไฟฟ้าดับ ให้ระบายน้ำภายในถังซักก่อนนำผ้าออก

1. ถอดปลั๊กสายไฟของเครื่องซักผ้าออกจากเต้ารับหลัก
2. ค่อยๆ กดบริเวณด้านบนของที่ปิดตัวกรองเพื่อเปิด

3. ค่อยๆ ดึงท่อทิ้งน้ำฉุกเฉินออกมา

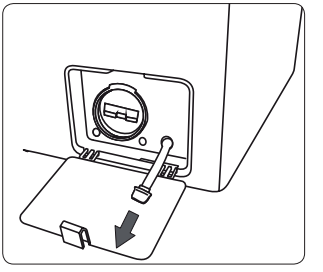

4. ในขณะที่ถือส่วนปลายของท่อทิ้งน้ำ ให้เปิดฝาปิดท่อ

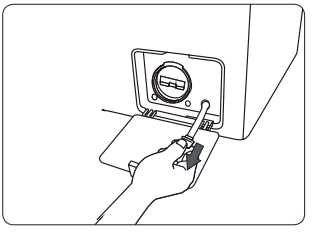

5. ปล่อยให้น้ำไหลลงสู่ภาชนะ
6. ปิดฝาปิดท่อและใส่ท่อทิ้งน้ำกลับเข้าที่
7. ปิดที่ปิดตัวกรอง

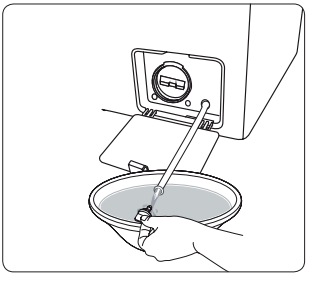

การทำความสะอาด

พื้นผิวของเครื่องซักผ้า

ใช้ผ้านุ่มเช็ดที่มีน้ำยาทำความสะอาดที่ไม่มีสารขัดถู ห้ามฉีดน้ำลงบนเครื่องซักผ้า

ตัวกรอง

ขอแนะนำให้ทำความสะอาดตัวกรอง 5 หรือ 6 ครั้งต่อปีเพื่อป้องกันการอุดตัน ตัวกรองที่อุดตันอาจลดประสิทธิภาพของการซักฟอก

1. ปิดเครื่องซักผ้า และถอดปลั๊กสายไฟ
2. ระบายน้ำที่เหลืออยู่ภายในถังซักออก โดยดูที่ "**ท่อทิ้งน้ำฉุกเฉิน**" ในหน้า **35**
3. เปิดที่ปิดตัวกรองโดยใช้เหรียญหรือกุญแจ
4. หมุนฝาปิดตัวกรองไปทางซ้าย และระบายน้ำที่เหลืออยู่ออกให้หมด
5. ถอดตัวกรองออก

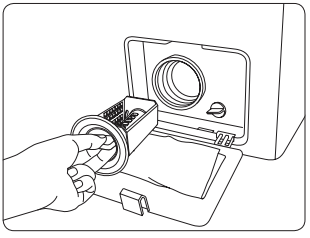

6. ทำความสะอาดตัวกรองโดยใช้แปรงขนนุ่ม ตรวจสอบว่าใบพัดของปั๊มน้ำทิ้งภายในตัวกรองไม่อุดตัน
7. ใส่ตัวกรองกลับเข้าที่ และหมุนฝาปิดตัวกรองไปทางขวา

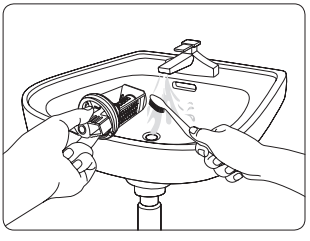

- หากต้องการเปิดฝาปิดตัวกรองอย่างปลอดภัย ให้ดันเข้าและหมุนทวนเข็มนาฬิกา สปริงของฝาปิดจะทำให้สามารถเปิดฝาได้
- หากต้องการปิดฝาปิดตัวกรองอย่างปลอดภัย ให้หมุนตามเข็มนาฬิกา สปริงจะมีเสียงกริ๊กๆ ซึ่งเป็นการทำงานปกติ

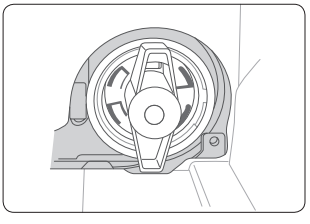

- ถ้าตัวกรองอุดตัน รหัสข้อผิดพลาด "**5E**" จะปรากฏบนหน้าจอ

ข้อควรระวัง

- โปรดปิดฝาปิดตัวกรองอย่างเหมาะสมหลังจากทำความสะอาดตัวกรอง มิฉะนั้นอาจทำให้เกิดน้ำรั่ว
- โปรดใส่ตัวกรองอย่างเหมาะสมหลังจากทำความสะอาดตัวกรอง มิฉะนั้นตัวกรองอาจไม่ทำงานหรืออาจทำให้เกิดน้ำรั่ว

ช่องใส่น้ำยาซักผ้า

1. ในขณะที่กด **สลักคลาย (A)** ที่ด้านในของช่อง ให้เลื่อนเพื่อเปิดช่อง
2. นำฝาปิดของช่องออกด้วยการจับและดึง **ส่วน (B)** ออก

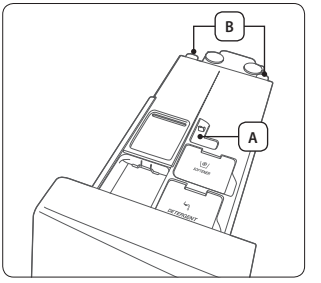

3. นำ **ที่ใส่น้ำยาปรับผ้านุ่ม (C)** ออกดังที่แสดง

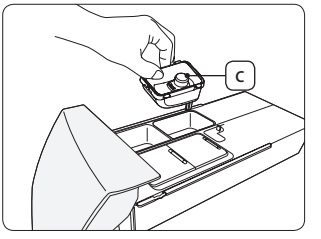

4. ทำความสะอาดช่องโดยให้น้ำไหลผ่านและใช้แปรงขนนุ่ม

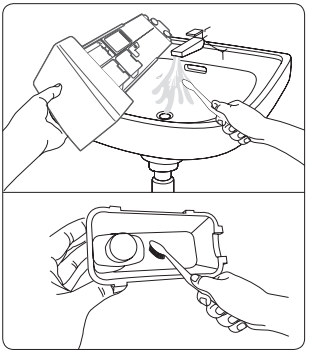

5. ทำความสะอาดช่องของที่ใส่น้ำยาซักผ้าด้วยแปรงขนนุ่ม
6. ประกอบฝาปิดช่องใส่เข้ากับช่องใส่น้ำยาซักผ้าให้แน่น
7. เลื่อนช่องเข้าด้านในเพื่อปิด

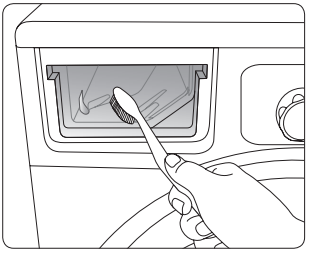

หากต้องการนำน้ำยาซักผ้าที่ตกค้างอยู่ออก ให้ใช้โปรแกรม **ซักเร็ว** โดยที่ถังซักว่างเปล่า

การคืนสภาพจากการเป็นน้ำแข็ง

เครื่องซักผ้าอาจกลายเป็นน้ำแข็งเมื่ออุณหภูมิต่ำกว่า 0 °C

1. ปิดเครื่องซักผ้า และถอดปลั๊กสายไฟ
2. เทน้ำอุ่นบนก๊อกน้ำเพื่อคลายท่อจ่ายน้ำให้หลวม
3. ถอดท่อจ่ายน้ำ และแช่ในน้ำอุ่น
4. เทน้ำอุ่นลงในถังซักและปล่อยทิ้งไว้เป็นเวลาประมาณ 10 นาที
5. ต่อท่อจ่ายน้ำเข้ากับก๊อกน้ำอีกครั้ง

ถ้าเครื่องซักผ้ายังคงไม่ทำงานตามปกติ ให้ดำเนินการซ้ำตามขั้นตอนข้างต้นจนกว่าจะสามารถทำงานได้ตามปกติ

การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน

โปรดหลีกเลี่ยงการไม่ใช้เครื่องซักผ้าเป็นเวลานาน

ถ้าเกิดกรณีนี้ขึ้น ให้ระบายน้ำออกจากเครื่องซักผ้าและถอดปลั๊กสายไฟ

1. หมุนปุ่มเลือกโปรแกรมเพื่อเลือกโปรแกรม **ซักเร็ว**
2. ตรวจสอบว่าถังซักว่างเปล่า และกดปุ่ม **เริ่ม/พัก**
3. เมื่อโปรแกรมดำเนินการเสร็จ ให้ปิดก๊อกน้ำและถอดท่อจ่ายน้ำ
4. ปิดเครื่องซักผ้า และถอดปลั๊กสายไฟ
5. เปิดประตูเพื่อให้มีอากาศไหลเวียนในถังซัก

การแก้ไขปัญหา

จุดตรวจสอบ

ถ้าคุณพบว่าเกิดปัญหากับเครื่องซักผ้า โปรดตรวจสอบที่ตารางด้านล่างนี้ก่อนและลองดำเนินการตามคำแนะนำ

ปัญหา	การดำเนินการ
เครื่องซักผ้าไม่เริ่มทำงาน	• ตรวจสอบว่าเสียบปลั๊กเรียบร้อย • ตรวจสอบว่าประตูปิดเหมาะสมแล้ว • ตรวจสอบว่าก๊อกน้ำเปิดอยู่ • กดปุ่ม **เริ่ม/พัก** อีกครั้ง
การจ่ายน้ำไม่เพียงพอ หรือไม่มีการจ่ายน้ำ	• เปิดก๊อกน้ำเต็มที่ • ตรวจสอบว่าท่อจ่ายน้ำไม่จับตัวเป็นน้ำแข็ง • ตรวจสอบว่าท่อจ่ายน้ำไม่บิดงอหรืออุดตัน • ทำความสะอาดตัวกรองที่ท่อจ่ายน้ำ
มีน้ำยาซักผ้าหลงเหลือในช่องใส่น้ำยาซักผ้าหลังจากการซัก	• ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ • ตรวจสอบว่าได้เติมน้ำยาซักผ้าที่กึ่งกลางของช่องใส่น้ำยาซักผ้า
เครื่องซักผ้าสั่นมากหรือเกิดเสียง	• ตรวจสอบว่าเครื่องซักผ้าตั้งอยู่บนพื้นที่เรียบเสมอกัน ถ้าพื้นที่เรียบเสมอกัน ให้ใช้ขาตั้งปรับระดับเพื่อปรับระดับ • ตรวจสอบว่านำหมุดสำหรับการขนส่งออกแล้ว • ตรวจสอบว่าเครื่องซักผ้าไม่ได้สัมผัสกับวัตถุอื่น • ตรวจสอบว่าปริมาณผ้าอยู่ในถังอย่างสมดุล
เครื่องซักผ้าไม่ทิ้งน้ำ และ/หรือปั่นหมาด	• ตรวจสอบว่าท่อทิ้งน้ำเหยียดตรงตลอดเส้นทางไปยังระบบระบายน้ำ • ตรวจสอบว่าตัวกรองเศษผ้าไม่อุดตัน
ประตูไม่เปิด	• กดปุ่ม **เริ่ม/พัก** เพื่อหยุดเครื่องซักผ้า • ประตูจะยังล็อคอยู่ตราบเท่าที่ด้านในของเครื่องซักผ้ายังคงร้อนหลังจากใช้การทำความร้อน • ปิดใช้งาน ล็อคป้องกันเด็ก ถ้าเปิดใช้งานอยู่

ถ้าปัญหาเหล่านี้ยังคงอยู่ โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่

รหัสข้อมูล

ถ้าเครื่องซักผ้าไม่ทำงาน คุณสามารถดูรหัสข้อมูลบนหน้าจอได้ โปรดตรวจสอบตารางด้านล่างและลองดำเนินการตามคำแนะนำ

ปัญหา	การดำเนินการ
dE	• ตรวจสอบว่าประตูปิดเหมาะสมแล้ว • ตรวจสอบว่าผ้าไม่ได้ติดอยู่ที่ประตู
4E	• ตรวจสอบว่าก๊อกน้ำเปิดอยู่ • ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ • ทำความสะอาดตะแกรงตัวกรองเมื่อมีการอุดตัน
5E	• ทำความสะอาดตัวกรองเมื่อมีการอุดตัน • ตรวจสอบว่าท่อทิ้งน้ำไม่บิดงอตลอดเส้นทางไปยังระบบระบายน้ำ
UE	• ผ้าไม่สมดุล กระจายผ้าให้เท่าๆ กัน
CE / 3E	• ผู้ใช้ไม่สามารถแก้ไขได้เอง โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่

ถ้ารหัสข้อมูลยังคงปรากฏบนหน้าจอ โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่

ข้อมูลจำเพาะ

การปกป้องสิ่งแวดล้อม

- อุปกรณ์นี้ได้รับการผลิตจากวัสดุรีไซเคิล หากคุณต้องการทิ้งอุปกรณ์นี้ โปรดปฏิบัติตามระเบียบการทิ้งขยะของพื้นที่ ตัดสายไฟเพื่อป้องกันไม่ให้มีการต่อสายไฟกับเครื่องใช้ไฟฟ้านี้อีก ถอดประตูออก เพื่อป้องกันไม่ให้สัตว์หรือเด็กติดอยู่ภายใน
- อย่าใช้ผงซักฟอกเกินปริมาณที่แนะนำโดยผู้ผลิตผงซักฟอก
- ใช้สารขจัดคราบและสารฟอกขาวก่อนการซักเฉพาะเมื่อจำเป็นเท่านั้น
- ประหยัดน้ำและไฟฟ้าโดยซักเต็มถัง (ปริมาณผ้าขึ้นอยู่กับโปรแกรมที่ใช้)

ผังการดูแลผ้า

สัญลักษณ์ต่อไปนี้เป็นคำแนะนำในการดูแลผ้า ฉลากการดูแลผ้าประกอบด้วยสัญลักษณ์สี่อย่างตามลำดับ: การซัก การฟอกขาว การอบแห้ง และการรีด (ตลอดจนการซักแห้ง ถ้าจำเป็น) การใช้สัญลักษณ์ช่วยให้มีความสม่ำเสมอระหว่างผู้ผลิตเสื้อผ้าแต่ละรายทั้งสำหรับผ้าในประเทศและผ้าที่นำเข้า โปรดปฏิบัติตามฉลากการดูแลเพื่อยืดอายุการใช้งานของผ้าและลดปัญหาในการซัก

	ผ้าหนา		ห้ามรีด
	ผ้าบาง		ซักแห้งด้วยสารทำละลายใดก็ได้
	ซักผ้าได้ที่ความร้อน 95 °C		ซักแห้ง
	ซักผ้าได้ที่ความร้อน 60 °C		ซักแห้งด้วยเปอร์คลอไรด์ น้ำมันไฟแช็ก แอลกอฮอล์บริสุทธิ์ หรือ R113 เท่านั้น
	ซักผ้าได้ที่ความร้อน 40 °C		ซักแห้งด้วยน้ำมันเครื่องบิน แอลกอฮอล์บริสุทธิ์ หรือ R113 เท่านั้น
	ซักผ้าได้ที่ความร้อน 30 °C		ห้ามซักแห้ง
	ซักมือเท่านั้น		ห้ามแขวน
	ซักแห้งเท่านั้น		แขวนได้
	ใช้สารฟอกขาวในน้ำเย็นได้		ตากด้วยไม้แขวนเสื้อ
	ห้ามใช้สารฟอกขาว		ใช้เครื่องอบ ความร้อนปกติ
	สามารถรีดที่ความร้อนสูงสุด 200 °C		ใช้เครื่องอบ ความร้อนต่ำ
	สามารถรีดที่ความร้อนสูงสุด 150 °C		ห้ามใช้เครื่องอบ
	สามารถรีดที่ความร้อนสูงสุด 100 °C		

ข้อมูลจำเพาะ

ประเภท			เครื่องซักผ้าฝาหน้า
ชื่อรุ่น			WD17H7*****
ขนาด			ก 686 × ล 811 × ส 990 (มม.)
แรงดันน้ำ			50 kPa ~ 800 kPa
ปริมาณน้ำ			86 ลิตร
น้ำหนักสุทธิ			105 กก.
ความจุในการซักและการปั่นหมาด			17.0 กก.
ความจุในการอบแห้ง			9.0 กก.
การใช้พลังงานไฟฟ้า	ขณะซัก	220 โวลต์	250 วัตต์
	ขณะซักและให้ความร้อน		2200 วัตต์
	การอบแห้ง		2100 วัตต์
	ปั่นหมาด		600 วัตต์
	ปั๊ม		35 วัตต์
น้ำหนักบรรจุภัณฑ์		กระดาษ	1.3 กก.
		พลาสติก	1.8 กก.
การหมุนปั่นหมาด			1100 รอบต่อนาที

ลักษณะและข้อมูลจำเพาะของผลิตภัณฑ์อาจมีการเปลี่ยนแปลงโดยไม่ได้แจ้งให้ทราบล่วงหน้า

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th/support

DC68-03464F-01